




User Manual

Hybrid Inverter

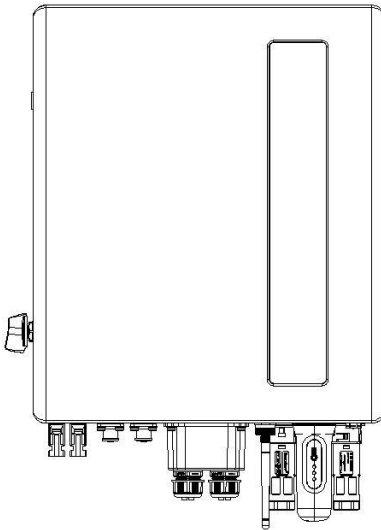

Applicable models

H1PL-1J3K-EU
H1PL-1J3.6K-EU
H1PL-1J4.6K-EU
H1PL-1J5K-EU
H1PL-1J6K-EU

Applicable System

Single phase system

Contents

1. Introduction	02
1.1 Product Description	02
1.2 Packaging	03
2. Safety & Warning	04
2.1 Safety	04
2.2 General Safety Instructions	04
2.3 Notice for Use	06
2.4 Notice for Disposal	06
3. Overview	07
3.1 Intelligent LED Indicators	07
4. Installation	08
4.1 Select a Location for the Inverter	08
4.2 Mounting the Inverter	09
4.3 PE Cable Installation	11
4.4 PV Input Cable Installation	12
4.5 Battery Power Cable Installation	15
4.6 AC Cable Installation	16
4.7 Communication Cable Installation	18
4.8 Meter Installation	23
4.9 Inverter Remote Monitoring Connection	25
4.10 Parallel System Wiring	26
5. Commissioning & Shutdown	28
5.1 Preparation of Commissioning	28
5.2 Commissioning Procedure	28
5.3 Log in the APP via Bluetooth	39
5.4 Shutdown Procedure	50
6. Maintenance	51
6.1 Smart O&M	51
7. Troubleshooting	52
8. Specifications	57
9. Annex A – Important Information	66

1.1 Product Description

The Haier H1PL Series is designed for residential hybrid systems, which can work with batteries to optimize self-consumption. The unit can operate in both off-grid and on-grid modes.

This manual covers the Haier H1PL Series model listed below:

H1PL-1J3K-EU, H1PL-1J3.6K-EU, H1PL-1J4.6K-EU, H1PL-1J5K-EU, H1PL-1J6K-EU

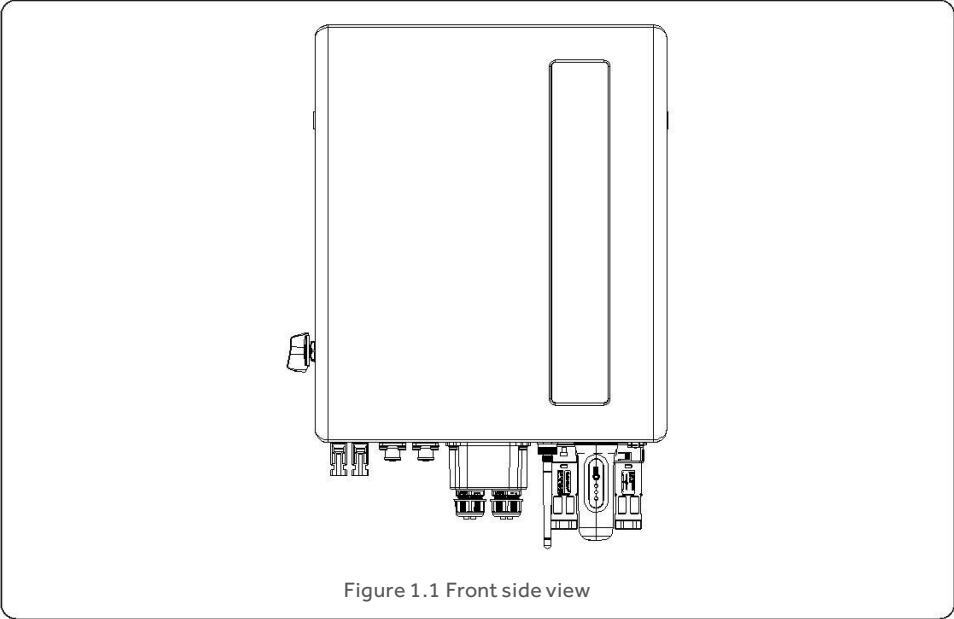


Figure 1.1 Front side view



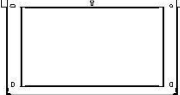



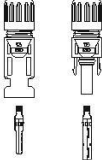

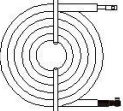
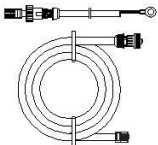
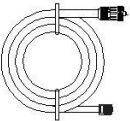



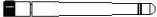



Figure 1.2 Bottom side view

1.2 Packaging

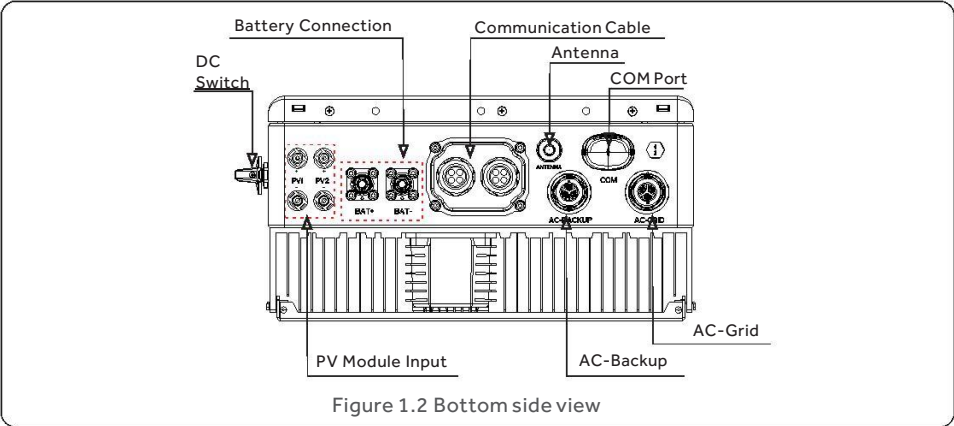Please ensure that the following items are included in the packaging with your machine:

 <p>Inverter x1</p>	 <p>Back plate x1</p>	 <p>Fastening screw x2</p>	 <p>AC grid terminal x1</p>
 <p>AC backup terminal x1</p>	 <p>DC connector x2</p>	 <p>RJ45 connector x8</p>	 <p>Battery Cable x2 (optional)</p>
 <p>Battery Temperature Sensor or CAN cable x1</p>	 <p>RS485 Meter cable x1 (For Eastron Meter)</p>	 <p>Eastron Meter and CT x1</p>	 <p>Connector x1</p>
 <p>WiFi/GPRS Stick x1</p>	 <p>Bluetooth Antenna x1</p>	 <p>Manual</p>	

If anything is missing, please contact your local distributor.

2.1 Safety

The following types of safety instructions and general information appear in this document as described below:



DANGER:

“Danger” indicates a hazardous situation which if not avoided, will result in death or serious injury.



WARNING:

“Warning” indicates a hazardous situation which if not avoided, could result in death or serious injury.



CAUTION:

“Caution” indicates a hazardous situation which if not avoided, could result in minor or moderate injury.



NOTE:

“Note” provides tips that are valuable for the optimal operation of your product.



WARNING: Risk of fire

Despite careful construction, electrical devices can cause fires.

- Do not install the inverter in areas containing highly flammable materials or gases.
- Do not install the inverter in potentially explosive atmospheres.

2.2 General Safety Instructions



WARNING:

Only devices in compliance with SELV (EN 69050) may be connected to the RS485 and USB interfaces.



WARNING:

Please don't connect PV array positive (+) or negative (-) to ground, it could cause serious damage to the inverter.



WARNING:

Electrical installations must be done in accordance with the local and national electrical safety standards.



WARNING:

Do not touch any inner live parts until 5 minutes after disconnection from the utility grid and the PV input.



WARNING:

To reduce the risk of fire, over-current protective devices (OCPD) are required for circuits connected to the inverter.

The DC OCPD shall be installed per local requirements. All photovoltaic source and output circuit conductors shall have isolators that comply with the NEC Article 690, Part II.

All Haier single phase inverters feature an integrated DC switch.



CAUTION:

Risk of electric shock, do not remove cover. There is no user serviceable parts inside, refer servicing to qualified and accredited service technicians.



CAUTION:

The PV array supplies a DC voltage when they are exposed to sunlight.



CAUTION:

Risk of electric shock from energy stored in capacitors of the Inverter, do not remove cover for 5 minutes after disconnecting all power sources (service technician only). Warranty may be voided if the cover is removed without authorization .



CAUTION:

The surface temperature of the inverter can reach up to 75 °C (167 F). To avoid risk of burns, do not touch the surface of the inverter while it's operating. Inverter must be installed out of the reach of children.



NOTE:

PV module used with inverter must have an IEC 61730 Class A rating.



WARNING:

Operations below must be accomplished by licensed technician or Haier authorized person.



WARNING:

Operator must put on the technicians' gloves during the whole process in case of any electrical hazards.



WARNING:


AC BACKUP Port of Haier H1PL Series is not allowed to connect to the grid.



WARNING:

The Haier H1PL Series does not support parallel in three phase operation on the AC-BACKUP port.

The inverter support parallel in single phase and support generator.
(Only for 5/6kW)

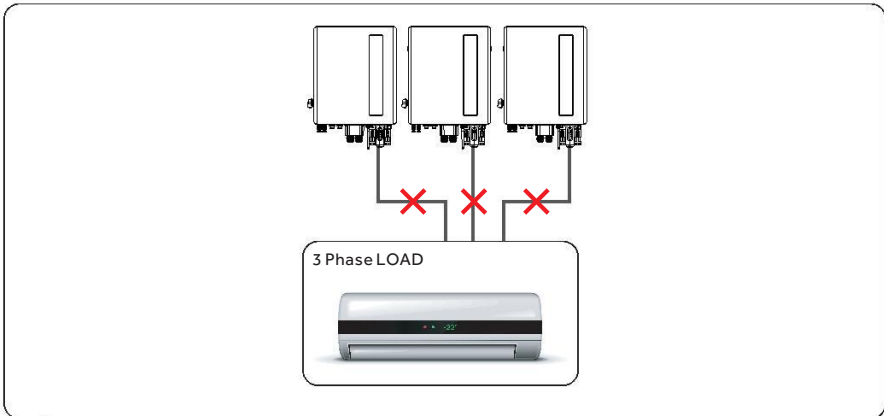

WARNING:

Please refer to the specification of the battery before configuration.

2.3 Notice for Use

The inverter has been constructed according to the applicable safety and technical guidelines. Use the inverter in installations that meet the following specifications ONLY:


1. Permanent installation is required.
2. The electrical installation must meet all the applicable regulations and standards.
3. The inverter must be installed according to the instructions stated in this manual.
4. The inverter must be installed according to the correct technical specifications.

2.4 Notice for Disposal

This product shall not be disposed of with household waste.

They should be segregated and brought to an appropriate collection point to enable recycling and avoid potential impacts on the environment and human health.


Local rules in waste management shall be respected .

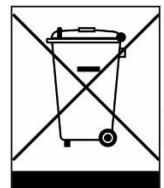






3.1 Intelligent LED Indicators

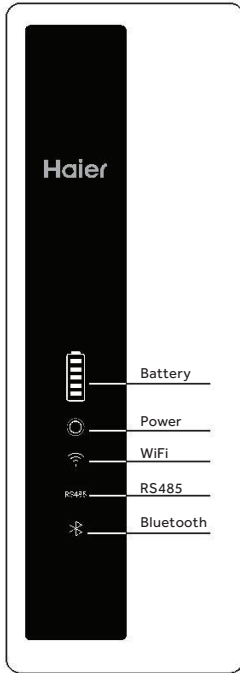There are five indicators on the The Haier Inverter (Battery, Power, WiFi, Ethernet and Bluetooth) which indicate the working status of the inverter.

The Bluetooth Antenna or WiFi datalogger shall be installed at the Antenna/COM port of the hybrid inverter before local debugging.



Light	Status	Description
 Battery	White Flashing every 3s	Battery discharging.
	White Flashing every 1.5s	Battery charging.
	White Solid ON	Idle.
	OFF	No Battery or not working.
 Power	White Solid ON	Normally Operating.
	Orange Solid ON	Warning.
	Red Solid ON or flashing every 3s	Alarm.
	OFF	No Battery or not working.
 WiFi	White Solid ON	COM Port is using.
	OFF	COM Port is not used.
 RS485	White Solid ON	RS485 Port is using.
	OFF	RS485 Port is not used.
 Bluetooth	White Solid ON	Bluetooth Port is using.
	OFF	Bluetooth Port is not used.

Turning On the LED Indicator Lights

After a few minutes, the LED indicator lights will turn off to conserve power. To turn the lights back on, short-press the Inverter LED light.



Alarm State

When the inverter has an alarm, the Inverter LED light turns red and starts flashing. It is recommended to connect to the inverter with the Bluetooth tool. Then you can determine what the alarm code is.




NOTE:

Battery/WiFi/Ethernet/Bluetooth indicators will automatically turn off after 1 minute. The Power indicator will remain on with lower brightness. Short press the Power indicator can wake up all indicators.

4.1 Select a Location for the Inverter

To select a location for the inverter, the following criteria should be considered:

- Exposure to direct sunlight may cause output power derating. It is recommended to avoid installing the inverter in direct sunlight.
- It is recommended that the inverter is installed in a cooler ambient which doesn't exceed 104°F/40°C.

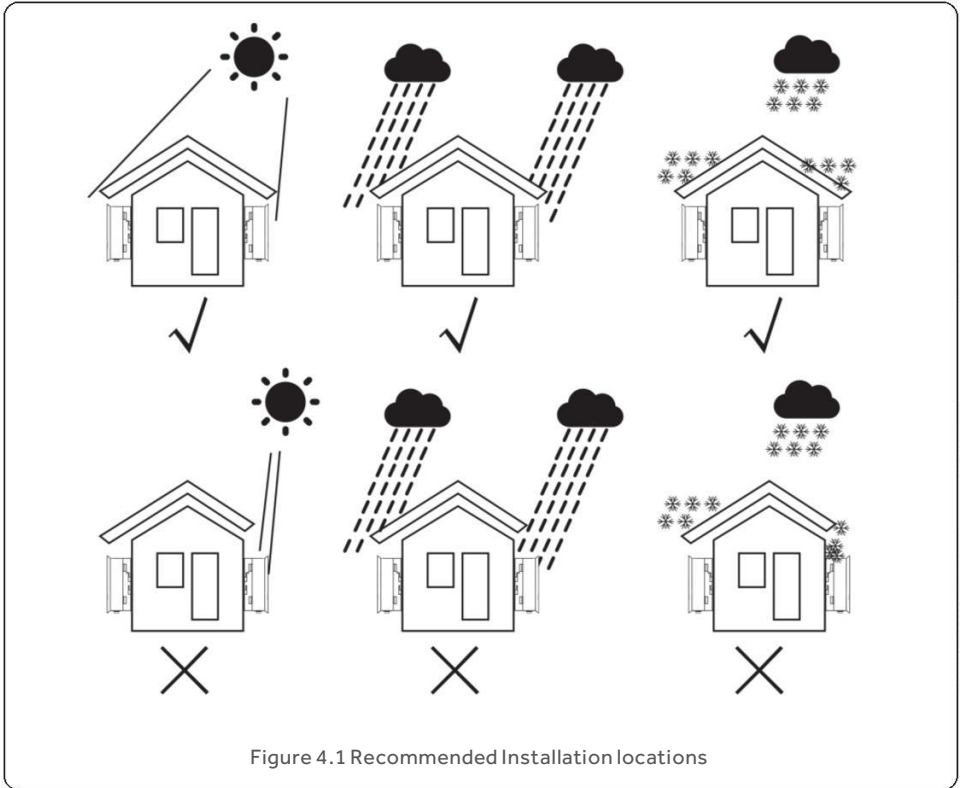

WARNING: Risk of fire



Despite careful construction, electrical devices can cause fires.

- Do not install the inverter in areas containing highly flammable materials or gases.
- Do not install the inverter in potentially explosive atmospheres.
- The mounting structure where the inverter is installed must be fireproof.

- Install on a wall or strong structure capable of bearing the weight of the machine (24kg).
- Install vertically with a maximum incline of +/- 5 degrees, exceeding this may cause output power derating.
- To avoid overheating, always make sure the flow of air around the inverter is not blocked. A minimum clearance of 400mm should be kept between inverters or objects and 800mm clearance between the bottom of the machine and the ground.

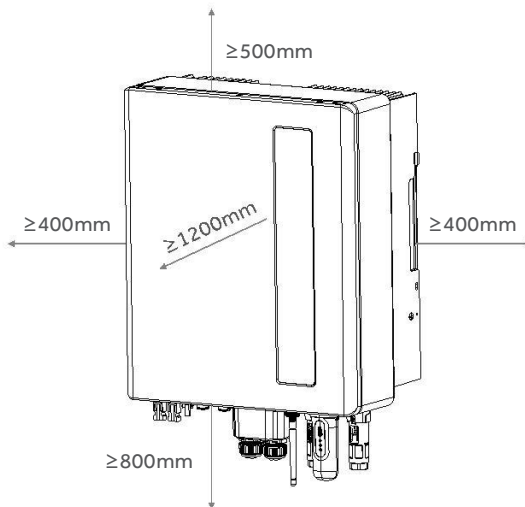


Figure 4.2 Inverter Mounting clearance

- Adequate ventilation must be provided.



NOTE:

Nothing should be stored on or placed against the inverter.



NOTE:

When installing the inverter inside the Haier HQBK -00-1P distribution module, the above minimum distance requirement does not apply as long as the clearance for the distribution module is respected. Please refer to the HA1L manual for further details.

4.2 Mounting the Inverter

Dimensions of mounting bracket:

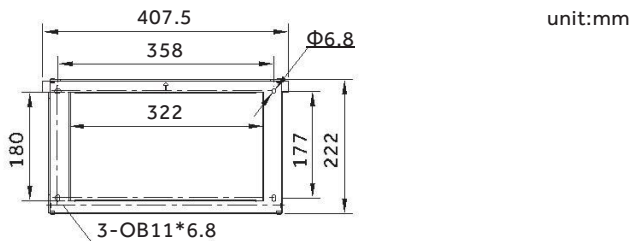


Figure 4.3 Inverter wall mounting

Once a suitable location has been found according to 4.1 using figure 4.3 mount the wall bracket to the wall.

The inverter shall be mounted vertically.

The steps to mount the inverter are listed below:

1. Select the mounting height of the bracket and mark the mounting holes.

For brick walls, the position of the holes should be suitable for the expansion bolts.

2. Lift up the inverter (be careful to avoid body strain), and align the back bracket on the inverter with the convex section of the mounting bracket. Hang the inverter on the mounting bracket and make sure the inverter is secure (see Figure 4.4)



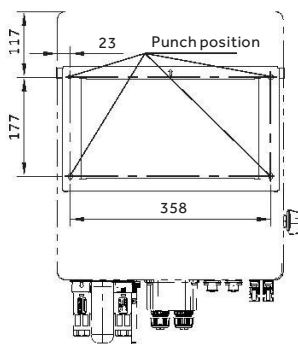


Figure 4.4 Wall Mount Bracket

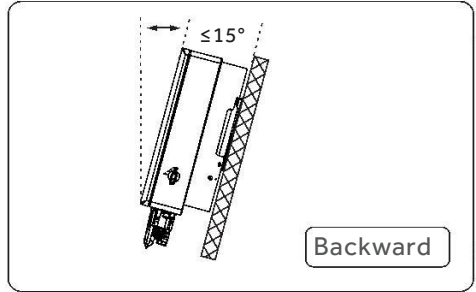

WARNING:

The inverter must be mounted vertically.

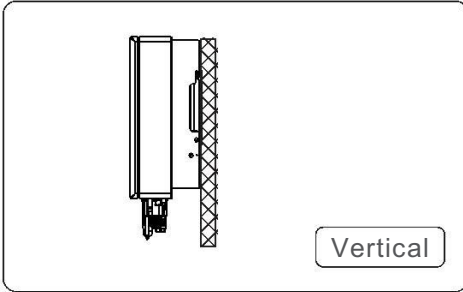


- Install vertically (+/- 5°) or tilted backward ($\leq 15^\circ$).
- Don't mount inverter on the tilted forward wall.
- Don't mount inverter on the horizontal.

4.3 PE Cable Installation

An external ground connection is provided at the right side of inverter.

Prepare OT terminals: M4. Use proper tooling to crimp the lug to the terminal.

Connect the OT terminal with ground cable to the right side of inverter. The torque is 2N.m.

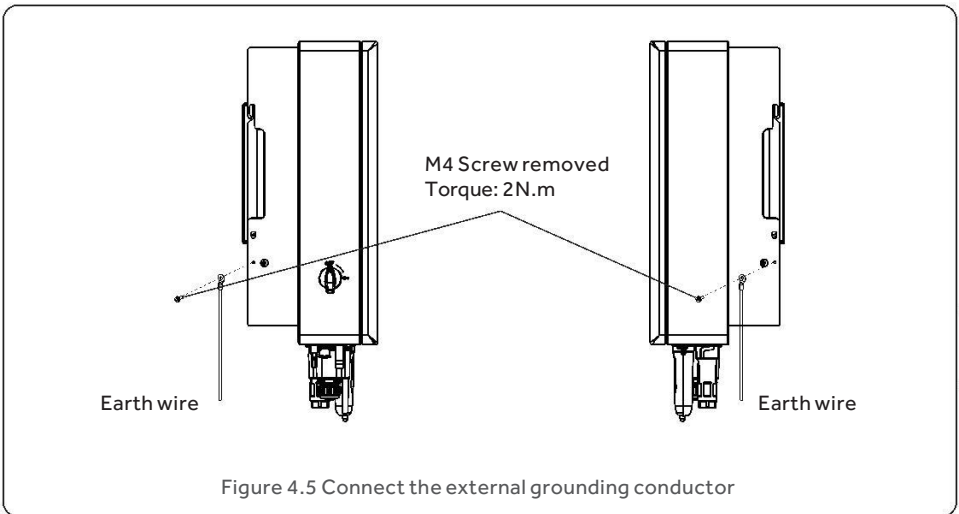

4.4 PV Input Cable Installation



Before connecting inverter, please make sure the PV array open circuit voltage is within the limit of the inverter.

 


Before connection, please make sure the polarity of the output voltage of PV array matches the "DC+" and "DC-" symbols.



Please use approved DC cable for PV system.

1. Select a suitable DC cable and strip the wires out by $7\pm 0.5\text{mm}$. Please refer to the table below for specific specifications.



Cable type	Cross section (mm ²)	
	Range	Recommended value
Industry generic PV cable	4.0-6.0 (12-10AWG)	4.0 (12AWG)

Figure 4.6

2. Take the DC terminal out of the accessory bag, turn the screw cap to disassemble it, and take out the waterproof rubber ring.



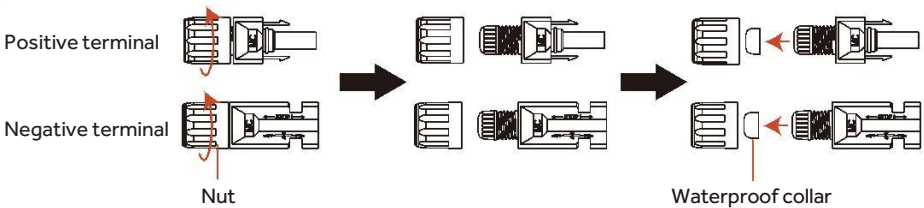


Figure 4.7


3. Pass the stripped DC cable through the nut and waterproof rubber ring.

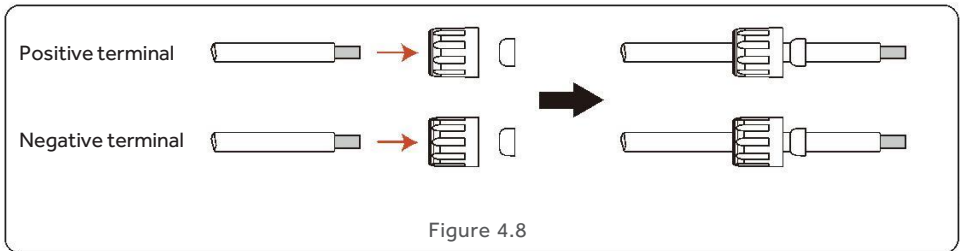

4. Connect the wire part of the DC cable to the metal DC terminal and crimp it with a special DC terminal crimping tool.

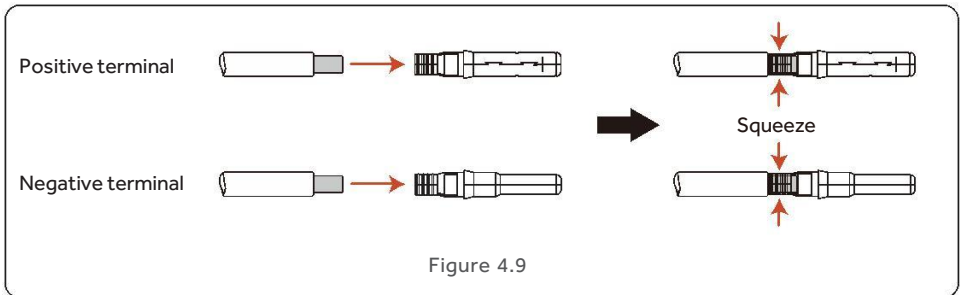

5. Insert the crimped DC cable into the DC terminal firmly, then insert the waterproof rubber ring into the DC terminal and tighten the nut.

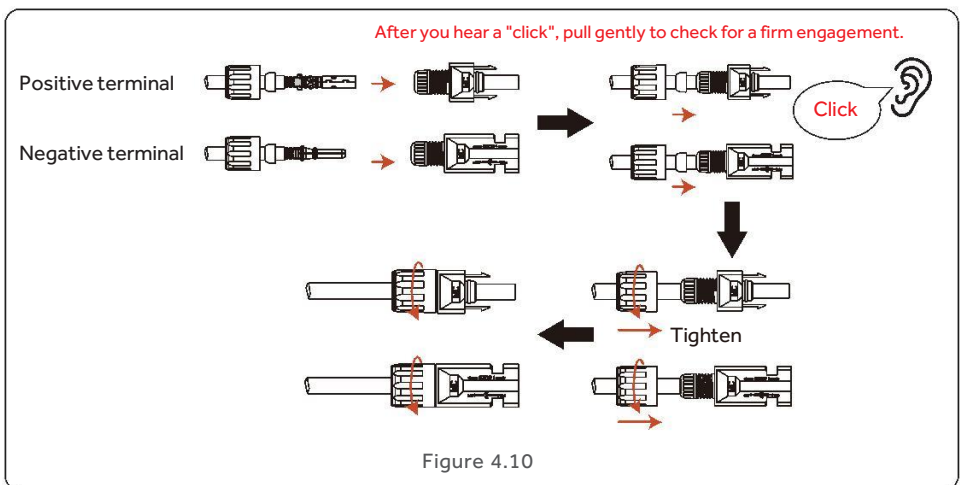

6. Measure PV voltage of DC input with multimeter, verify DC input cable polarity.

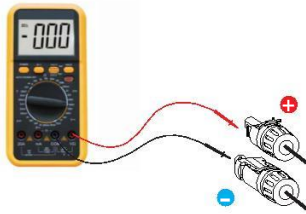


Figure 4.11

7. Connect the wired DC terminal to the inverter as shown in the figure, and a slight "click" is heard to prove the connection is correct.

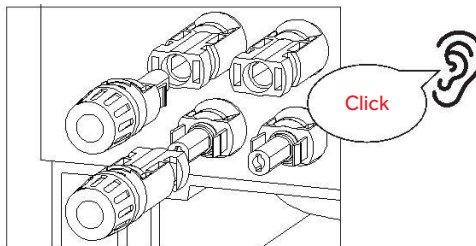


Figure 4.12



CAUTION:

If DC inputs are accidentally reversely connected or inverter is faulty or not working properly, it is NOT allowed to turn off the DC switch. Otherwise it may cause DC arc and damage the inverter or even lead to a fire disaster.

The correct actions are:

- * Use a clip-on ammeter to measure the DC string current.
- * If it is above 0.5A, please wait for the solar irradiance reduces until the current decreases to below 0.5A.
- * Only after the current is below 0.5A, you are allowed to turn off the DC switches and disconnect the PV strings.
- * In order to completely eliminate the possibility of failure, please disconnect the PV strings after turning off the DC switch to avoid secondary failures due to continuous PV energy on the next day.

Please note that any damages due to wrong operations are not covered in the device warranty.

4.5 Battery Power Cable Installation



NOTE:

1. The positive wiring (the angle of the limit tip is 90°) is connected to the positive socket, and the negative wiring (the angle of the limit tip is 180°) is connected to the negative socket;
2. When the terminal is inserted into the corresponding socket, you need to press the circular button on the terminal lightly and pay attention to the direction of the limit pin and the socket slot.

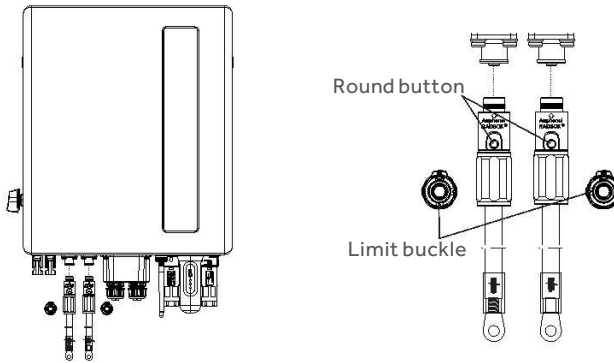


Figure 4.13

4.6 AC Cable Installation

There are two AC terminals and the assembly steps for both are the same.
Take out the AC connector parts from the packaging.

Describe	Numerical value
Cable diameter	10~14mm
Traverse cross sectional area	8~10mm ²
Exposure Length	9mm

Table 4.1

1. Disassemble the AC connector. Strip the AC wires about 9mm.


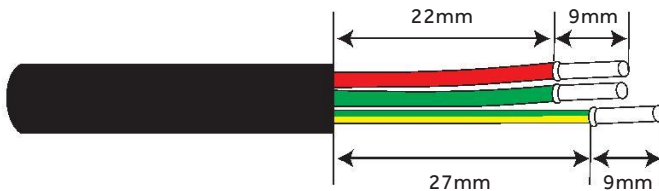


Figure 4.14

2. Set the parts on the cable.

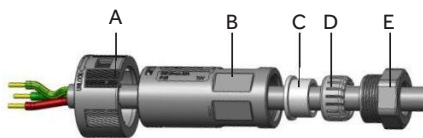

A: Locker
B: Body
C: Seal body
D: Claw
E: Nut

Figure 4.15

3. Crimp wires screw twisting torque 0.8+/-0.1N·m.



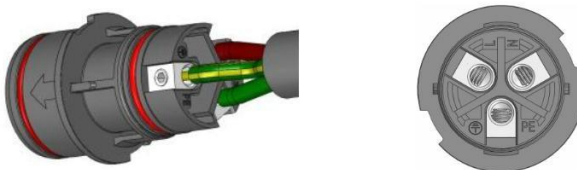


Figure 4.16

4. Push Housing into Body.

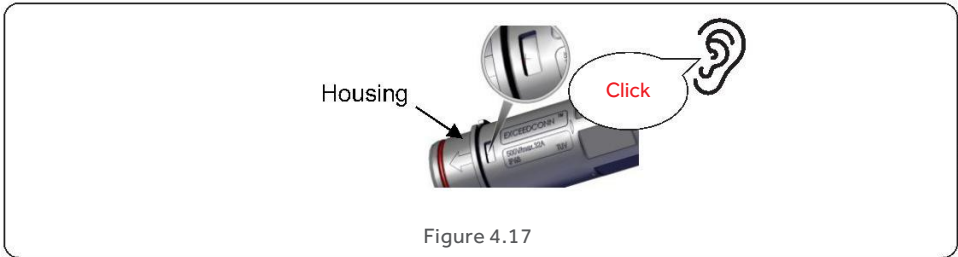


5. Insert Seal and Clamp Finger into socket ,then tighten the nut , torque 4+/-0.5N·m.

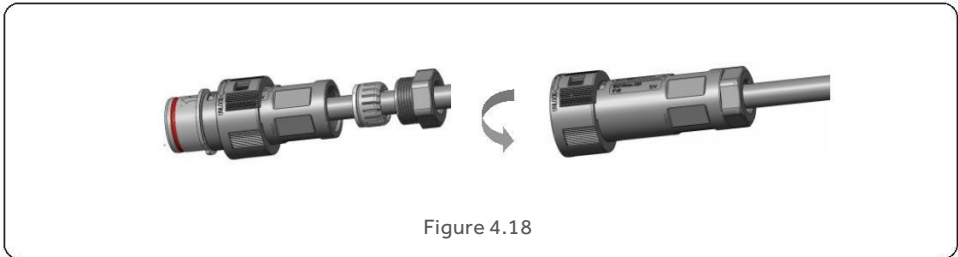

6. The same installation for both cable end plug and socket connectors.

7. Mating plug and socket: Push the plug into the socket completely, then rotate the locker according to the direction instructed by the marks on the locker.

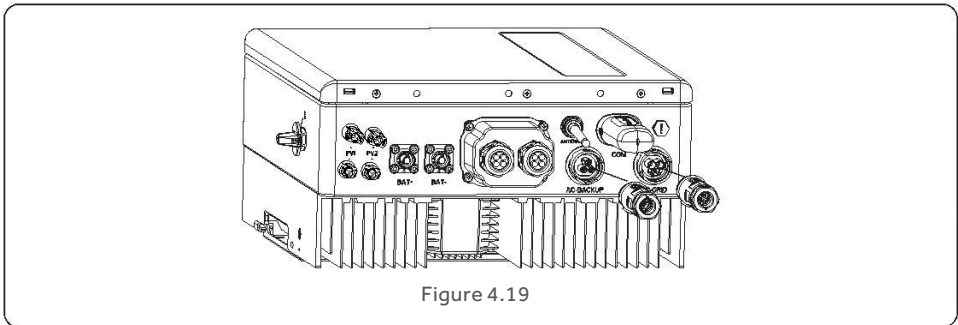


NOTE:



Before mating the plug and socket, please double check both AC Grid and AC Backup connectors. Do not connect the grid cables to the AC Backup port or connect the backup load cables to the AC Grid Port. Otherwise, it may leads to malfunction or damage.

4.7 Communication Cable Installation

4.7.1 Protective Cover for Communication Ports

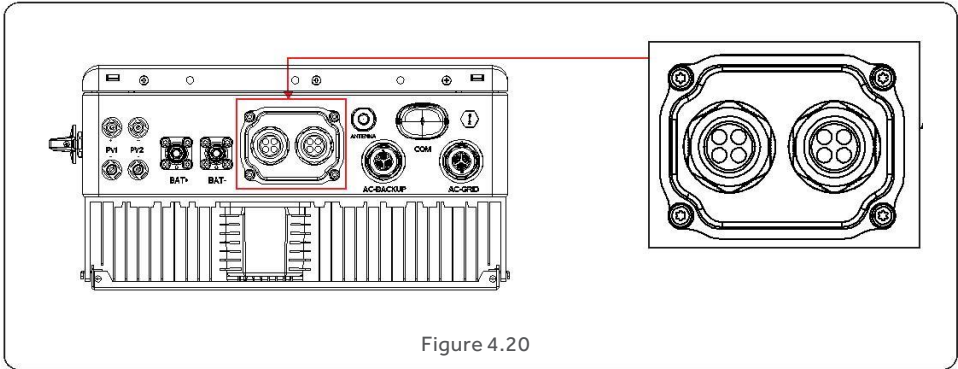


Inverter in the package is with a protective cover assembled to protect the communication ports.

- Step 1. Use Phillips screwdriver to take out the 4 screws on the cover.
- Step 2. Read through the following sections of the manual and prepare the internet cables correspondingly.
- Step 3. Loose the cable gland and remove the watertight caps inside the cable gland based on the number of the cables and keep the unused holes with watertight cap.
- Step 4. Lead the cables into the holes in the cable gland. (Hole Diameter: 6mm)
- Step 5. Crimp the RJ45 connectors onto the cables according to the pin definitions described in the following sections and connect to the ports accordingly.
- Step 6. Fasten the 4 screws on the cover (Torque: 1.7N.m-2 N.m)
- Step 7. Reassemble the cable gland and ensure there is no bending or stretching of the internet cables inside the cover.



NOTE:

 The 4-hole fastening rings inside the cable gland are with openings on the side.
Please separate the gap with hand and squeeze the cables into the holes from the side openings.



4.7.2 Communication Port Definition

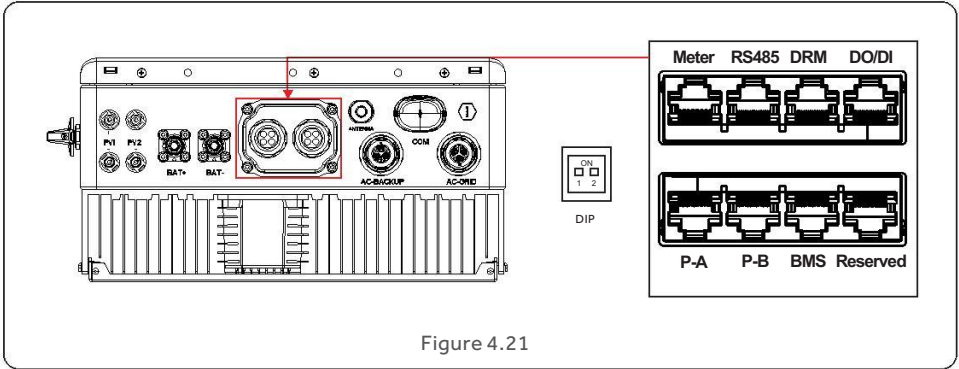


Figure 4.21

Port	Function
BMS	Used for CAN communication between inverter and Lithium battery BMS.
Meter	Used for RS485 communication between inverter and the smart meter. It is necessary to realize the normal hybrid control logics.
DRM	(Optional)To realize Demand Response or Logic interface function, this function may be required in UK and Australia.
RS485	(Optional) Used for Modbus RTU communication with 3rd party external device or controller.
P-A/P-B	(Optional) Parallel operation communication ports (Reserved).
DO/DI	(Optional) Dry contact port (Reserved).
DIP Switch	When a single inverter is running, Pin1&Pin2 are placed in the OFF position, and when multiple inverters are paralleled, refer to the parallel manual for DIP switch settings.

Table 4.3

4.7.3 BMS Port Connection

Take out the pre-made CAN cable from the package and connect one end to battery CAN port and then connect another end to the inverter BMS port. Cable Length: 3 meters.



Figure 4.22




NOTE:

Before connecting CAN cable with the battery, please check whether the communication pin sequence of the inverter and the battery match; If it does not match, you need to cut off the RJ45 connector at one end of the CAN cable and adjust the pin sequence according to the pin definitions of both inverter and battery.

Pin definition of the inverter CAN Port is following EIA/TIA 568B.

CAN-H on Pin 4: Blue

CAN-L on Pin 5: Blue/White

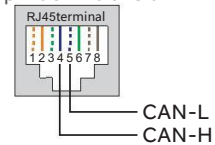

4.7.4 Meter Port Connection

Take out the pre-made Meter cable from the package and connect RJ45 end to inverter Meter port and then connect another end with loose RS485 A & B pins to the meter RS485 terminal. Cable Length: 5 meters.



Figure 4.23




NOTE:

Pin definition of the Meter Port is following EIA/TIA 568B.

RS485A on Pin 1: Orange/white

RS485B on Pin 2: Orange

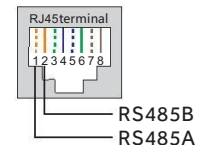

NOTE:

Compatible Smart Meter Pin definition.

Eastron SDM630MCT – Pin 13 is RS485B & Pin 14 is RS485A.

Eastron SDM630 – Pin B is RS485B & Pin A is RS485A.

4.7.5 DRM Port Connection (Optional)

4.7.5.1 For Remote Shutdown Function

Haier inverters support remote shutdown function to remotely control the inverter to power on and off through logic signals.

The DRM port is provided with an RJ45 terminal and its Pin5 and Pin6 can be used for remote shutdown function.

Signal	Function
Short Pin5 and Pin6	Inverter Generates
Open Pin5 and Pin6	Inverter Shutdown in 5s

Table 4.2

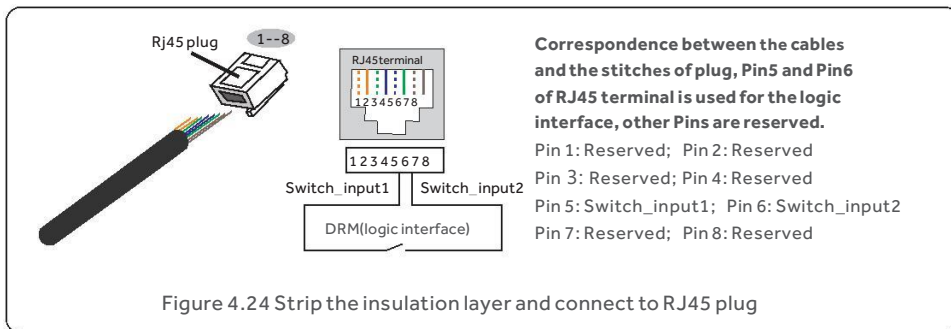


Figure 4.24 Strip the insulation layer and connect to RJ45 plug

4.7.5.2 For DRED Control Function (For AU and NZ Only)

DRED means demand response enable device. The AS/NZS 4777.2:2020 required inverter need to support demand response mode(DRM).

This function is for inverter that comply with AS/NZS 4777.2:2020 standard.

A RJ45 terminal is used for DRM connection.


Pin	Assignment for inverters capable of both charging and discharging	Pin	Assignment for inverters capable of both charging and discharging
1	DRM 1/5	5	RefGen
2	DRM 2/6	6	Com/DRM0
3	DRM 3/7	7	V+
4	DRM 4/8	8	V-

Table 4.5



NOTE:

Haier hybrid inverter is designed to provide 12V power for DRED.

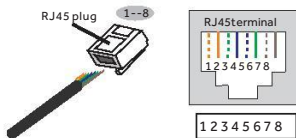

Correspondence between the cables and the stitches of plug

- Pin 1: white and orange ; Pin 2: orange
- Pin 3: white and green ; Pin 4: blue
- Pin 5: white and blue ; Pin 6: green
- Pin 7: white and brown ; Pin 8: brown

Figure 4.25 Strip the insulation layer and connect to RJ45 plug

4.7.6 RS485 Port Connection (Optional)


If a 3rd party external device or controller needs to communicate with the inverter, the RS485 port can be used. Modbus RTU protocol is supported by Haier inverters. To acquire latest protocol document, please contact Haier local service team or Haier sales.



NOTE:

Pin definition of the RS485 Port is following EIA/TIA 568B.

- RS485A on Pin 5: Blue/White
- RS485B on Pin 4: Blue

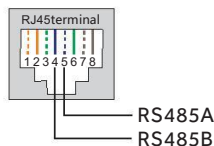

4.8 Meter Installation



CAUTION:

Make sure the AC cable is totally isolated from AC power before connecting the Smart Meter and CT.

A Smart Meter with the CT in product box is compulsory for hybrid system installation. It can be used to detect the grid voltages and current directions, provide the operating condition of the hybrid inverter via RS485 communications.



NOTE:

1. The Smart Meter with CT is already configured ; please do not change any settings on the Smart Meter.
2. One Smart Meter can be used with only one hybrid inverter.

The Haier H1PL Series inverter is able to connected Acrel meters or Eastron meters to fulfill the control logic of the self-consumption mode, export power control, monitoring, etc.

Easton 1ph meter (With CT): SDM120CTM

Meter RS485 Pin Definition: Pin 9 – RS485B, Pin 10 – RS485A

Below 4.8.1 section describes the connection diagram of 1ph meter Easton SDM120CTM.



NOTE:

Please note that the CT orientation must be correct, otherwise the system will not work properly.



4.8.1 Single phase meter installation

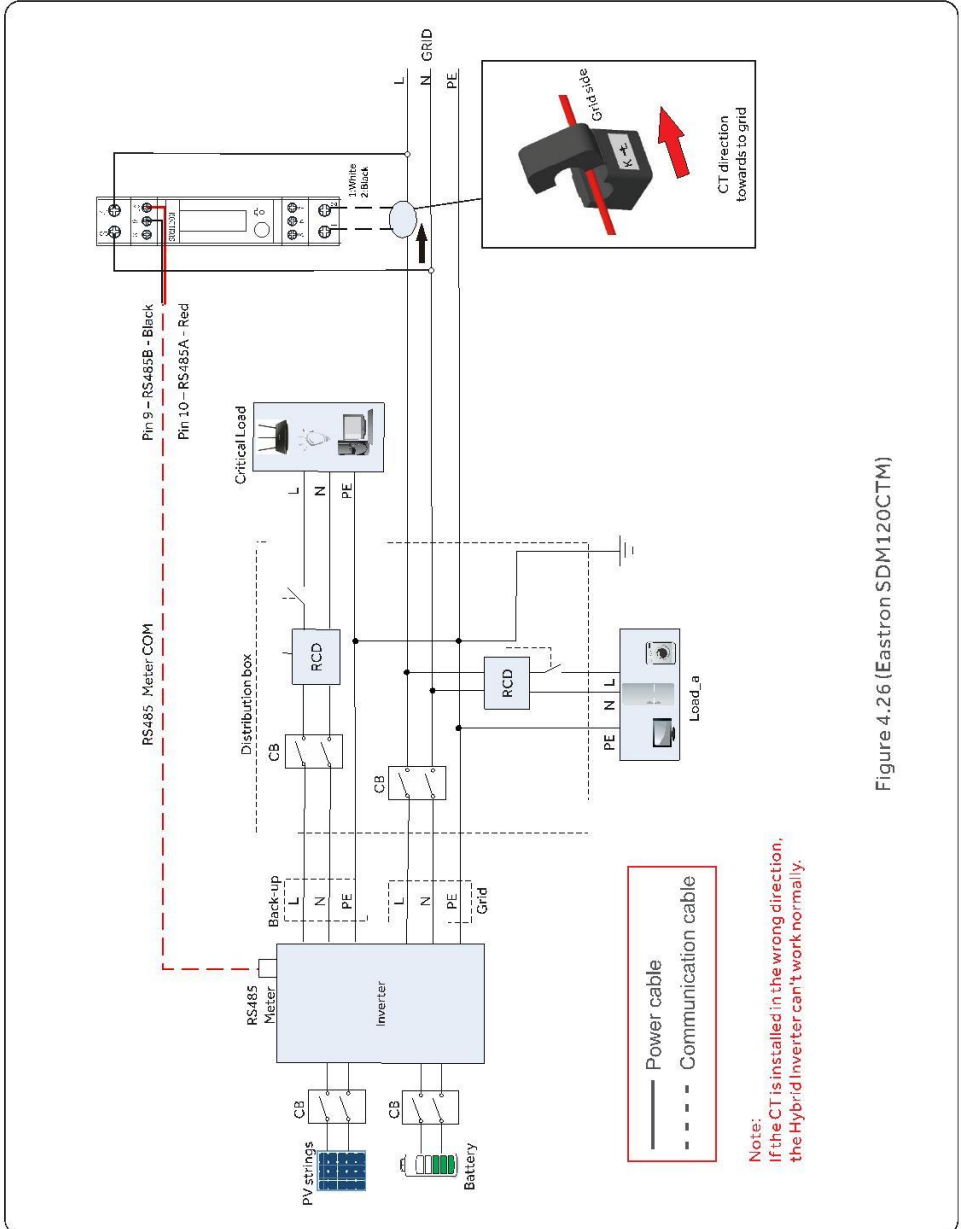


Figure 4.26 (Eastron SDM120CTM)

4.9 Inverter Remote Monitoring Connection

The inverter can be remotely monitored via WiFi, LAN or 4G.

The USB type COM port at the bottom of the inverter can connect to different kinds of data loggers to realize the remote monitoring on cloud platform.

To install data loggers, please refer to corresponding user manuals of data loggers.



The data loggers are optional and can be purchased separately.

Dust cover is provided the inverter package in case the port is not used.



WARNING:

The USB type COM port is only allowed to connect data loggers. It is forbidden to be used for other purposes.

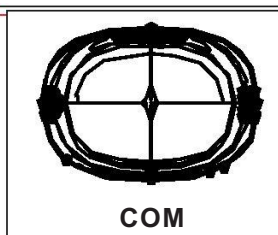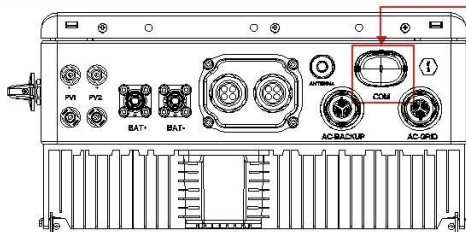

COM

Figure 4.27

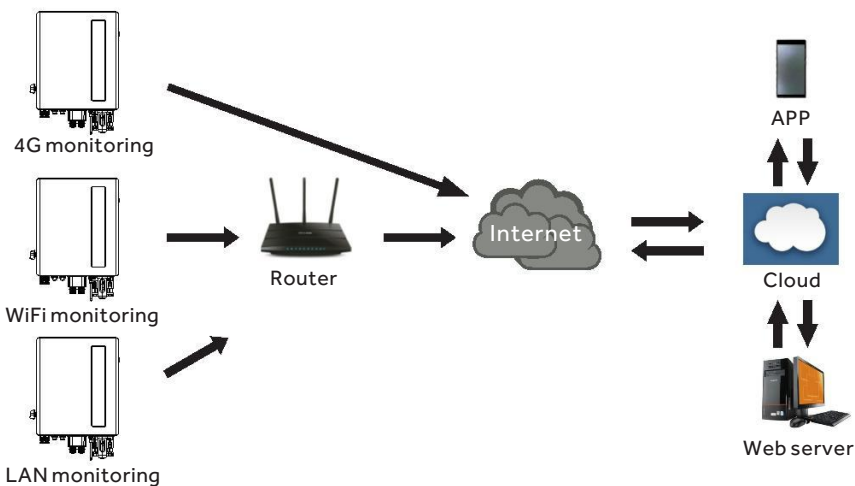


Figure 4.28 Wireless communication function

4.10 Parallel System Wiring



NOTE:

Only 4.6/5/6kW can be parallel, 3/3.6kW cannot.

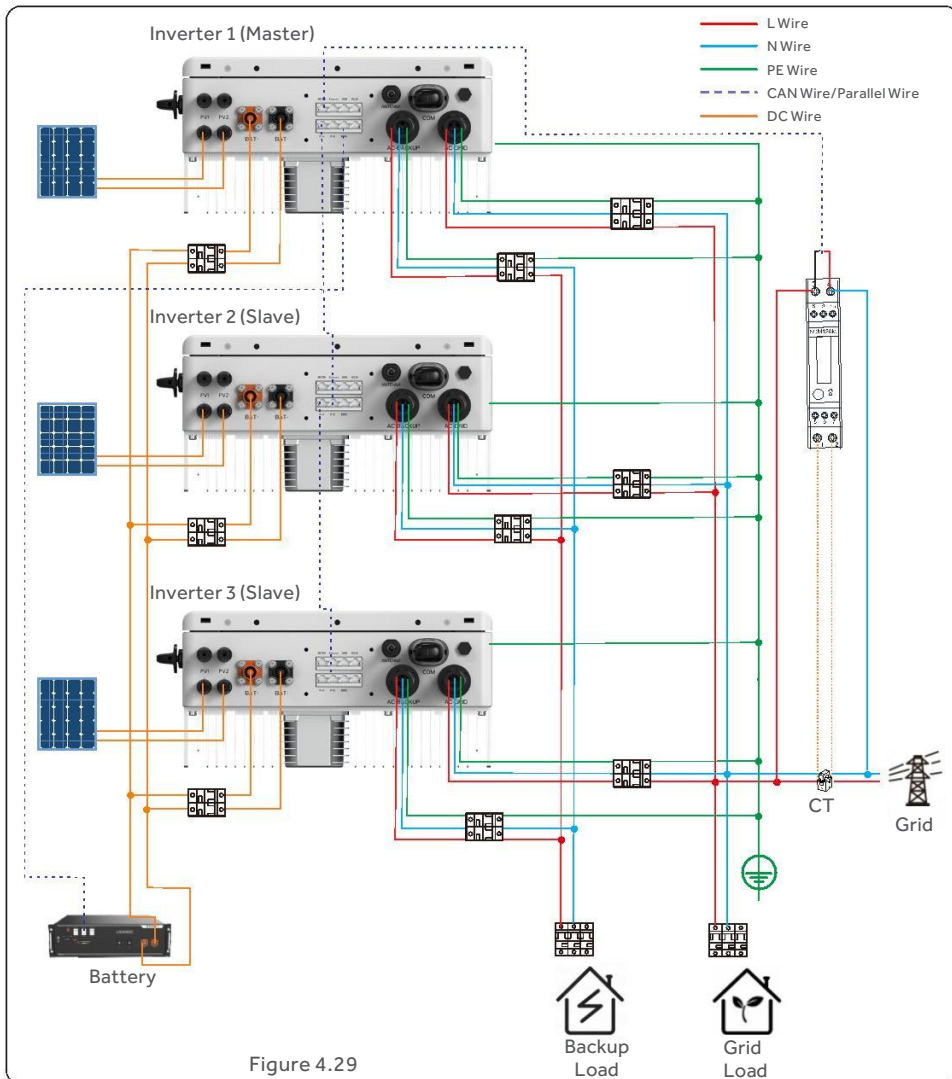



Figure 4.29

When multiple inverters are connecting in parallel, ONLY same model (same power rating) can be used.



NOTE:



Only 4.6/5/6kW can be parallel, 3/3.6kW cannot.

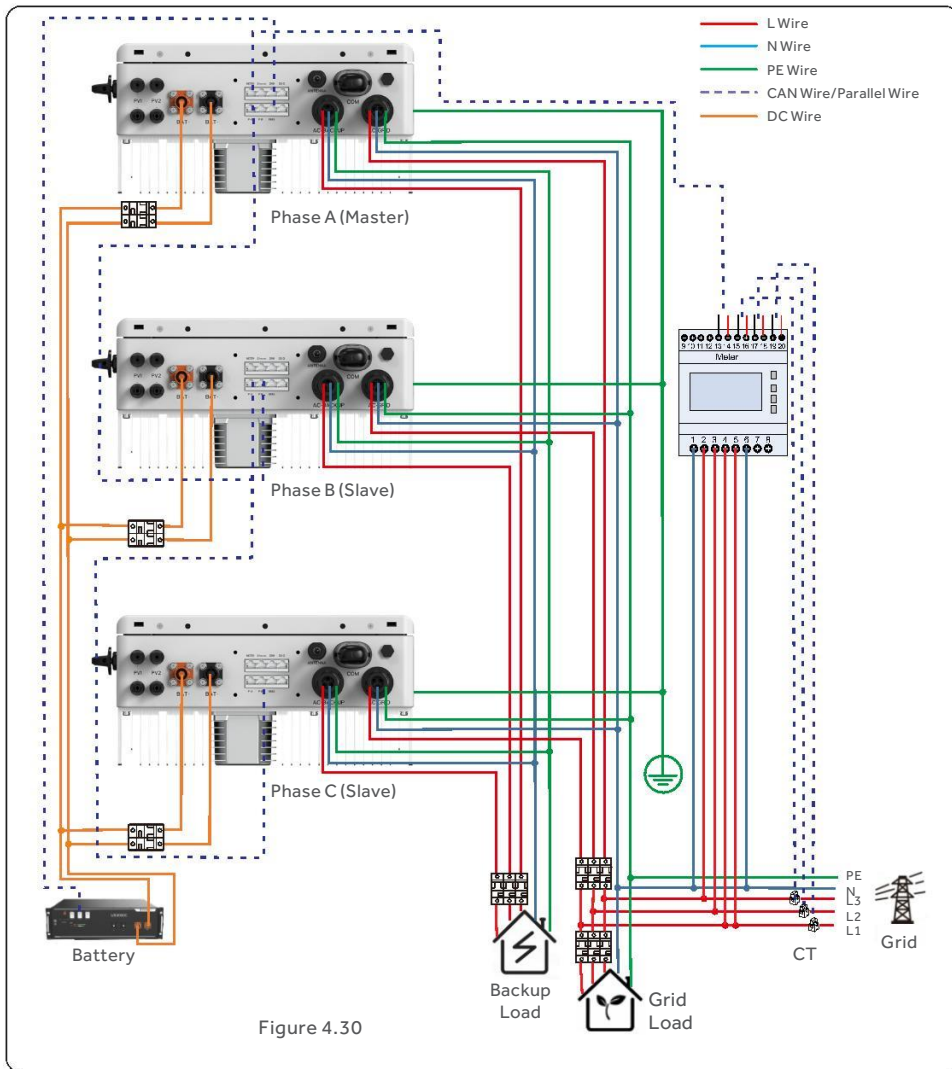

When multiple inverters are connecting in parallel, ONLY same model (same power rating) can be used.

5.1 Preparation


- Ensure all the devices are accessible for operation, maintenance and service.
- Check and confirm that the inverter is firmly installed.
- Space for ventilation is sufficient for one inverter or multiple inverters.
- Nothing is left on the top of the inverter or battery module.
- Inverter and accessories are correctly connected.
- Cables are routed in safe place or protected against mechanical damage.
- Warning signs and labels are suitably affixed and durable.
- Bluetooth Antenna has been connected to the Antenna port of the inverter.
- An Android or IOS mobile phone with Bluetooth function is available.
- Measure DC voltage of PV strings and battery and ensure the polarity is correct.
- Measure AC voltage and frequency and ensure they are within local standard.

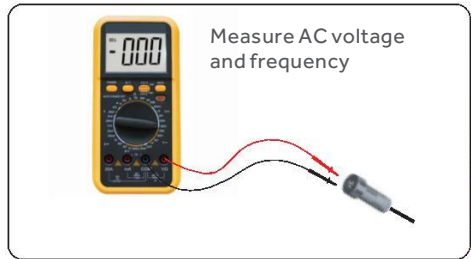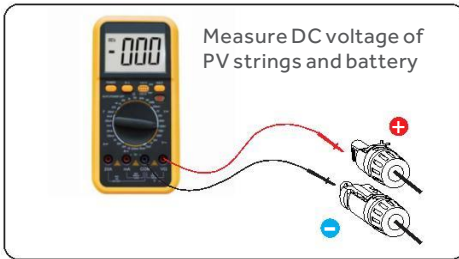

5.2 APP Download

There are three ways to download and install the latest APP:

1. Search the "Nahui Business" APP in Google Play or App Store.
2. Scan the QR code below to download.
3. Search at www.nahui-newenergy.com.

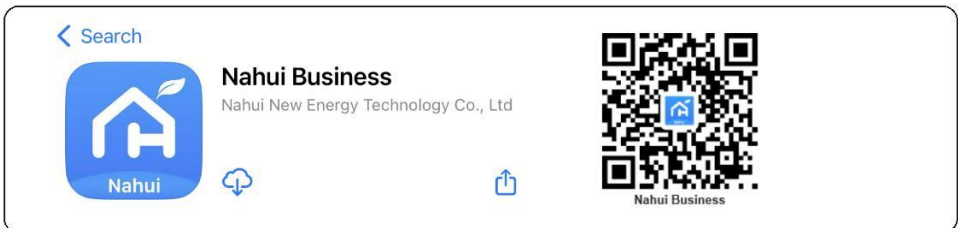

Please note that "Nahui Business" is for business installers who use the APP to set the parameters of the inverter.



NOTE:

This sequence is critical. Set the parameters of the inverter before the data logger distribution network. You cannot set the inverter parameters if the network distribution is performed first. In this situation, you need to clean the inverter data. (For details, refer to Figure 5.14).

5.3 Log in the APP via bluetooth

Step 1: **Installer to register an account.**

For new users, please click "**Register Company/Organization**" and select the user types (Company/Personal).

If you are an installer/distributor in the company, please select "**Company**" to fill in the information as prompted and get the verification code by phone or E-mail to register.

Suppose you are an individual installer without organization or a user who wants to create a plant yourself. In that case, you must select "**Personal**" to fill in the information as prompted to register.

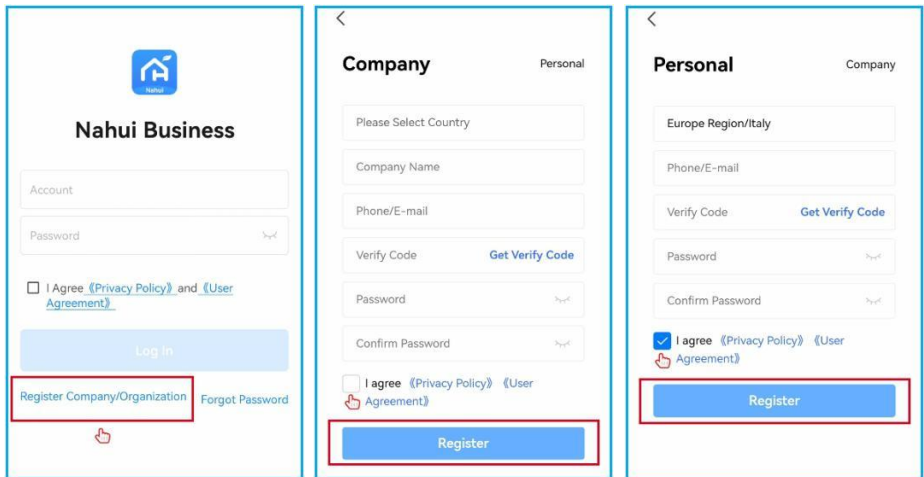


Figure 5.1



NOTE:

If your organization has already registered an account in the system, there is no need to register again. Please contact your organization's administrator to add you as a member in the system backend.

Step 2: Installer to log in to the APP.

Entering the account and password, then check the "Privacy Policy" and "User Agreement," then click "Log In".

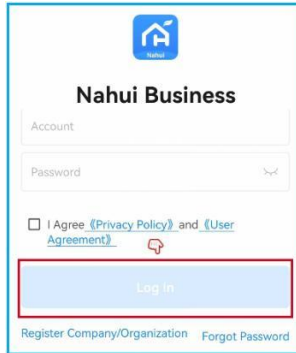


Figure 5.2

Step 3: Installer to create the Plant.

Click the "Plant" to enter the plant management module to "Add plant" and fill in the information to "Save".

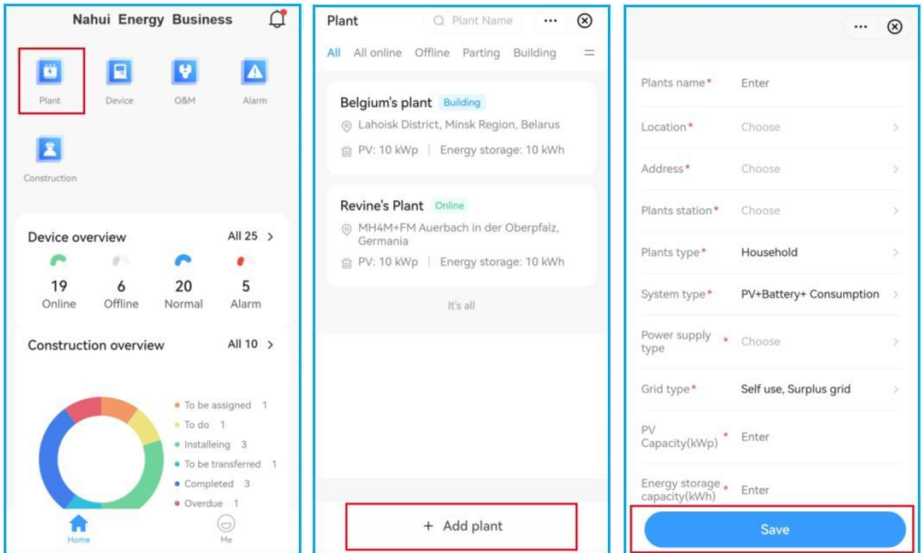


Figure 5.3



NOTE:

When setting the plant time zone, please keep it consistent with the installed site of the inverter.

Step 4: Connect the inverter with Bluetooth.

1. Click the "Add device" to enter the device list webpage. Click the inverter icon below the "Add Manually" to choose the "Haier (H1PL, H3PH)" and add it.
2. Choose the consistent SN code with inverter (displays the inverter icon) to enter the Control Validation passage. The default role is installer, then set your initial password for control validation. (After the login for the first time, initial settings are required.)
3. The inverter configuration page is displayed after the configuration is complete. You can click the "Setting" to set the parameters of the inverter.

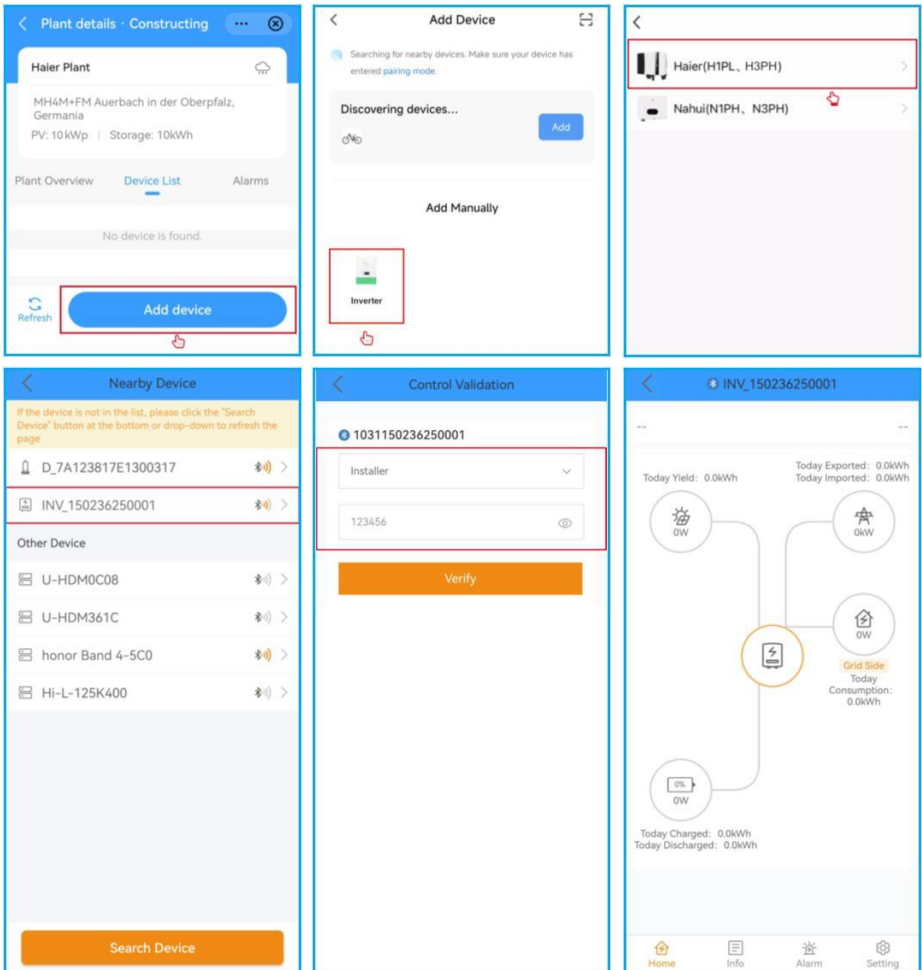


Figure 5.4



NOTE:

1. Please ensure your phone has Bluetooth/GPS turned on and the app has been authorized to use Bluetooth.
2. Click the inverter icon on the Nearby Device Page to add an inverter to set parameters.
3. Click the data logger icon of the Nearby Device Page to add an inverter to distribute the network. (For details, refer to the user manual of data logger S2-WL-ST(USB).)

Step 5: Set the parameters of the inverter.

After connecting the inverter for the first time, you need to perform initial settings on the inverter. Click **"Quick Settings"** to enter the quick Settings page.

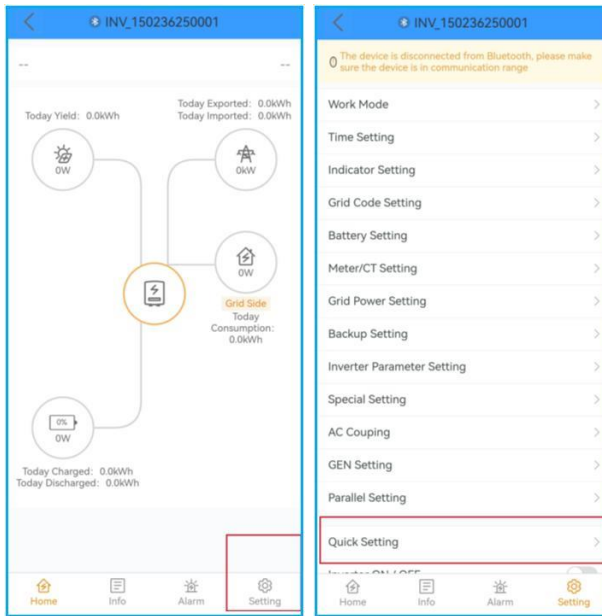


Figure 5.5

Step 5.1: Set the inverter Date and Time.

You can set it to follow the time on your mobile phone.

Step 5.1: Set the battery model.

It must be based on the battery model that is actually connected to the inverter. If there is no battery connected for the moment, please select "No Battery" to avoid alarms. The default setting for battery over-discharge SOC is 20%, and force charge SOC is 10%.

Step 5.1: Set the inverter Date and Time.

You can set it to follow the time on your mobile phone.

Step 5.2: Set the battery model.

It must be based on the battery model that is actually connected to the inverter. If there is no battery connected for the moment, please select "No Battery" to avoid alarms. Please refer to the battery setting on page 46.

Step 5.3: Set the meter setting.

Meter Type needs to be set. It must be based on the meter type that is actually connected to the inverter.

Meter Installation Location needs to be set. It is suggested to install the meter at the system grid connection point and select "**Meter in Grid**".

If there is no meter connected for the moment, please select "**No Meter**" to avoid alarms.



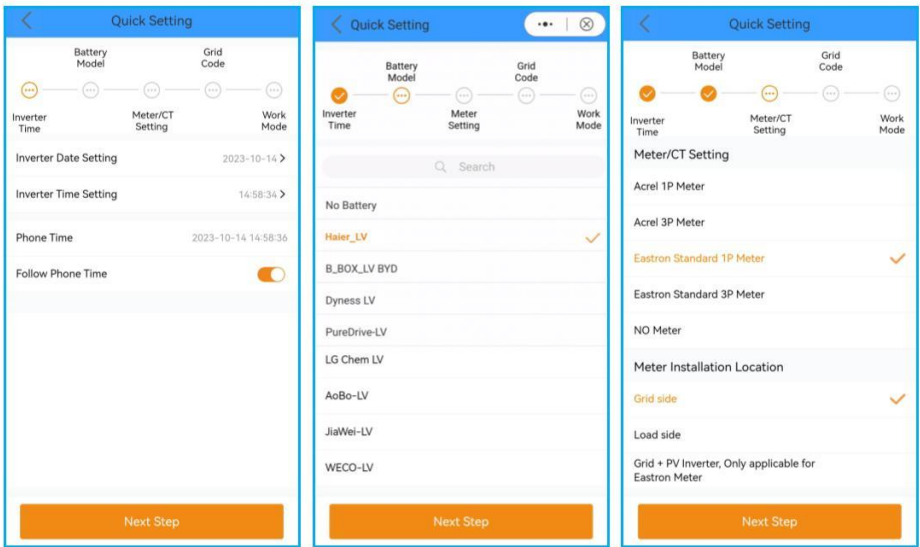


Figure 5.6

Meter Recommend

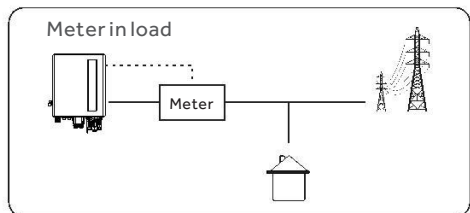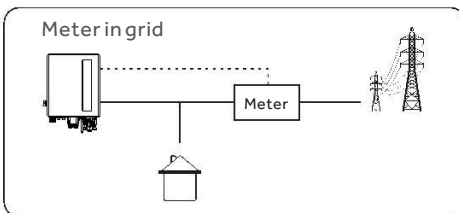

Step 5.4: Set the grid code setting.

Please select the grid code based on the local grid network requirements.

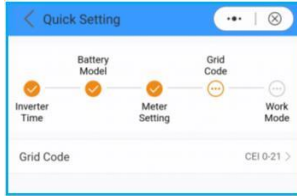


Figure 5.7

Step 5.5: Set the work mode setting.

There are four work modes that can be set.

- Work mode1: Self-Use Mode (default)
- Work mode2: Feed in Priority Mode
- Work mode3: Peak-shaving Mode
- Work mode4: Off-grid Mode

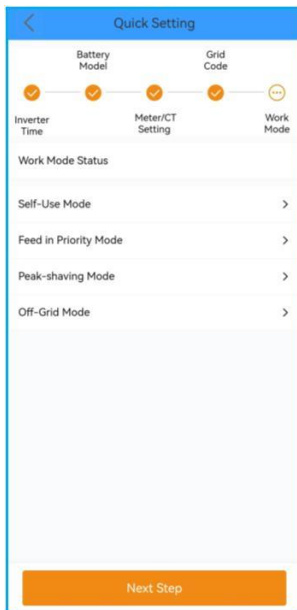


Figure 5.8

Work mode1: Self-Use Mode (default)

The recommended setting is Self-Use Mode.

This mode can maximize the use of PV power generation for household electricity or store it in batteries and use it for household electricity.

If you need to manually control the battery charging and discharging with respect to time, please use the Time of Use switch and the following set points.

The “Allow Grid Charging” is recommended to be turned on (If turned off, the inverter will not force charge the battery, and the battery could potentially go to sleep)

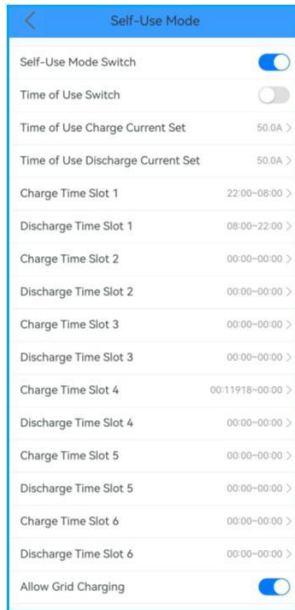


Figure 5.9

Work mode2: Feed in Priority Mode

This mode can preferentially send power to the grid when the load is met, used in areas with a subsidy for power to the grid.

If you need to manually control the battery charging and discharging with respect to time, please use the Time of Use switch and the following set points.

The "Allow Grid Charging" is recommended to be turned on (If turned off, the inverter will not force charge the battery, which could potentially go to sleep).

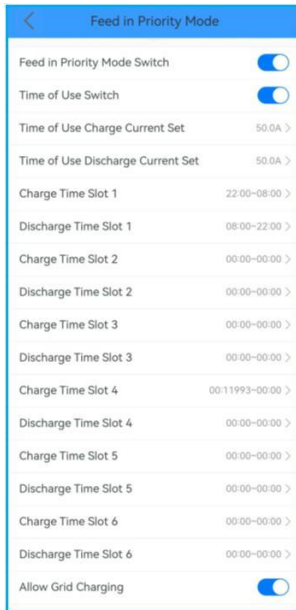


Figure 5.10

Work mode3: Peak-shaving Mode

This mode is typically used when the local grid company charges the electricity price based on the peak power consumption of the system. Customers can use this peak shaving mode to avoid the peak consumption power at the grid connection point.

Customers can set a maximum import power limit for this system, and the inverter can automatically discharge the battery to compensate for the excess load consumption to ensure the maximum import power limit at the grid connection point is not breached. (The correct operation logic depends on the availability of the battery; Nahui is not responsible for the excess electricity price caused by the battery fault.)

When the system load consumption power is lower than the max import power limit AND the battery SOC is lower than the Peak SOC, the system may charge the battery from the grid by using the difference between the max import limit and the actual load consumption power until the battery SOC is charged to Peak SOC. This logic ensures the battery can have enough energy to support the peak shaving logic.

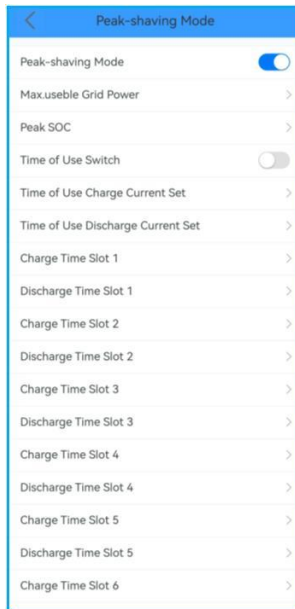


Figure 5.11

Work mode4: Off-Grid Mode

This mode is only used for pure off-grid and is not recommended for standard storage systems. Note that if this mode is enabled in the grid-connected state, the working logic of the machine will be confused, and the "Off-grid" will be displayed.



Figure 5.12

Step 5.6: Setup complete.

Now the initial settings on the inverter have been set, and you can switch on the inverter. DC switch and switch on the battery breaker to start up the system. You can also explore the APP to check the operating data, alarm message, or other advanced settings.

Step 5.7: Self-testing in Italy

Step 5.7.1 Click the "Setting" to enter the settings page;

Step 5.7.2 Click "Inverter parameter Setting" -- "Advanced Setting of Grid-tied Standard" -- "Special Setting" -- "Auto Test" successively to enter the system test page.

Step 5.7.3 Checking the test report.

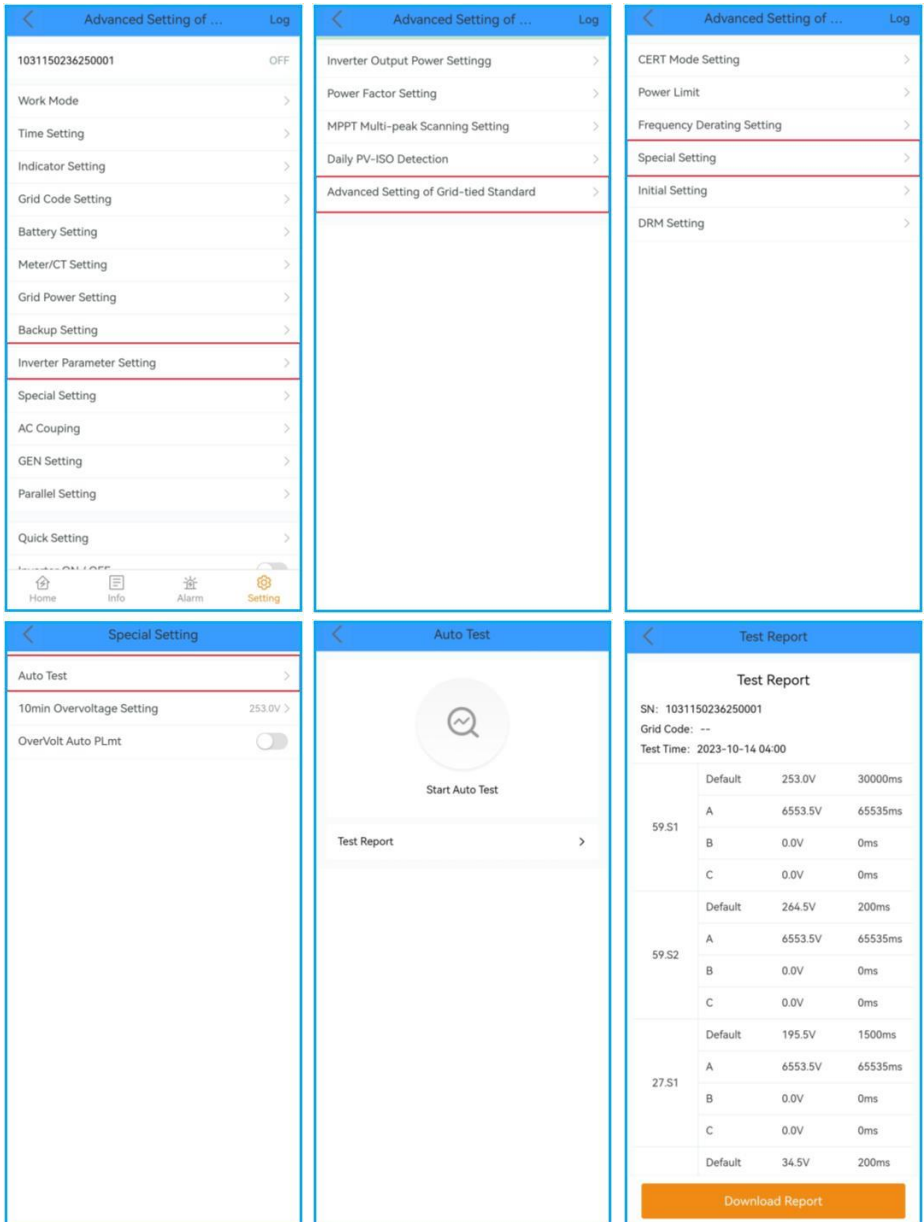


Figure 5.13

If the network distribution of the datalogger is performed first, the inverter parameters cannot be set. In this situation, you need to clean the datalogger of the device list.

Step1: Enter the added plant;

Step2: Click the datalogger in the device list;

Step3:Click the delete icon to confirm delete;

Step 4: Close the windows, then add the device again. (Please add the inverter to set parameters, then add the datalogger to distribute the network.)

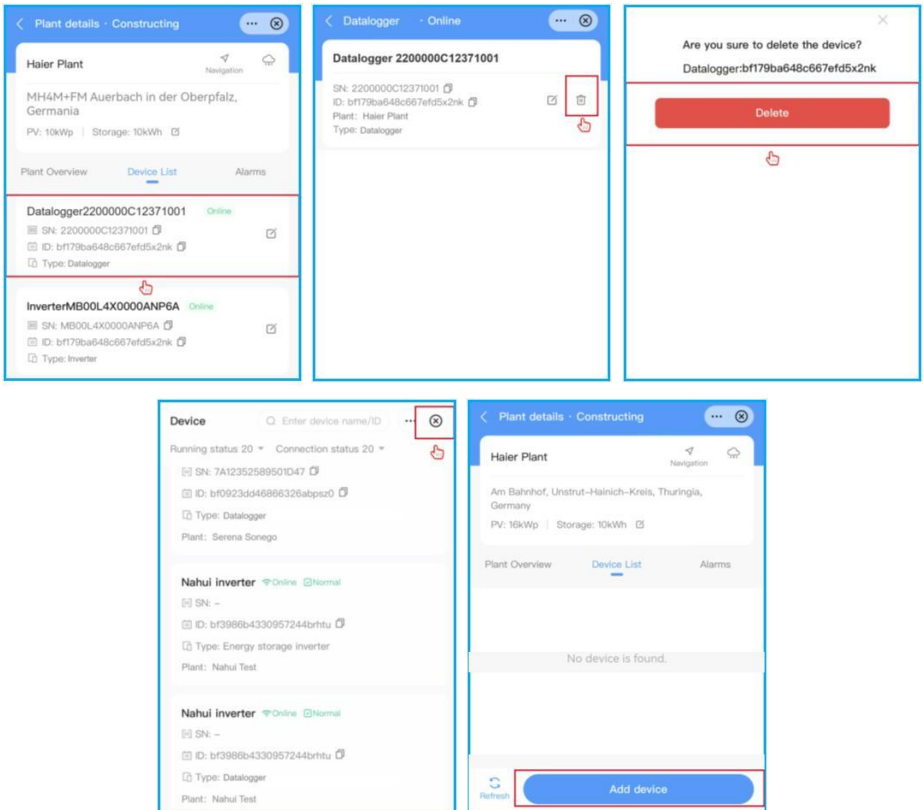


Figure 5.14

App Interface Structure

The interface structure of APP is shown as follows.

Check system data, equipment information, and alarms on Overview and Parameters interface. Set system equipment parameters on Setting interface.

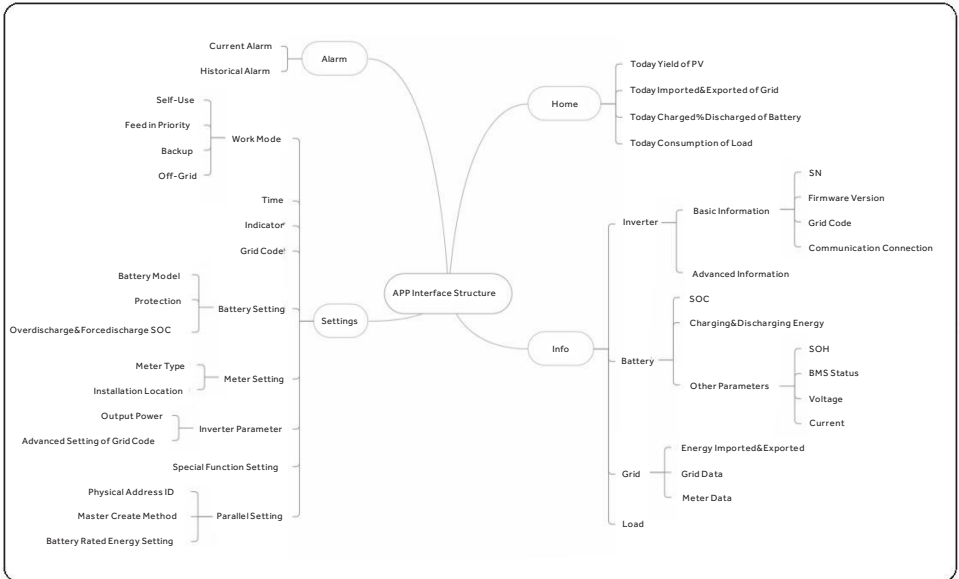


Figure 5.15

Energy flow diagram

The home page can display the working state, Today Yield of PV, Today Imported/Exported of Grid, Today Charged/Discharged of battery and Today Consumption of household electricity.

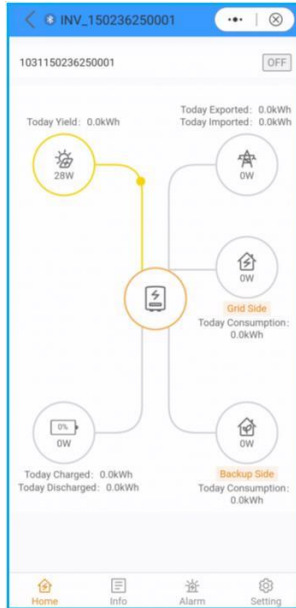


Figure 5.16

Information

The Inverter page can display basic information such as historical yield, today PV input power, Inverter SN, rated power, model number, DSP/HMI firmware version, grid code and communication connection. The advanced information is authorized by the installer.

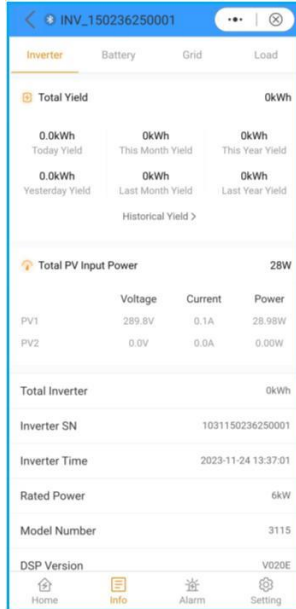


Figure 5.17

The Battery page can display charging&Discharging power, battery SOC, Charging& Discharging Energy, Other Parameters(From BMS), Other Parameters(From inverter).

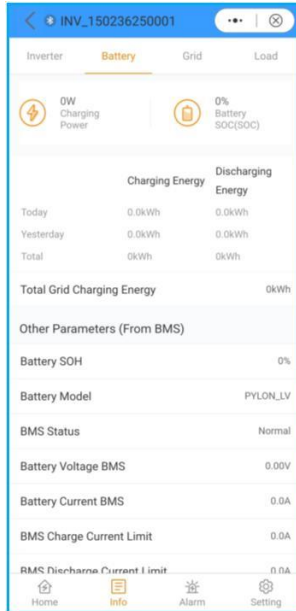


Figure 5.18

The grid page can display Energy Imported&Exported Grid Data and Meter data.

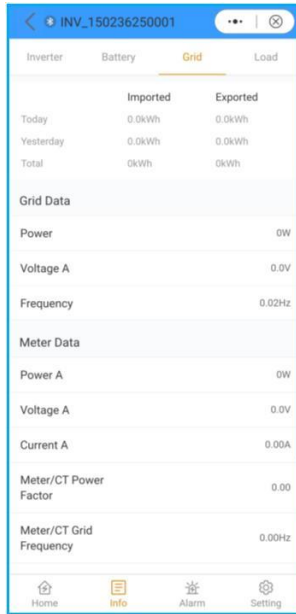


Figure 5.19

The Load page can display the load power consumption in the grid side and the backup side.

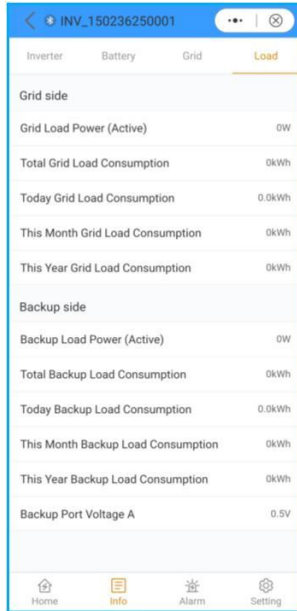


Figure 5.20

Settings

Mode Setting

The interface can display the current work mode, Self-Use/Feed in Priority/Backup/Off-Grid.

Please refer to page 33-36 for specific introduction.

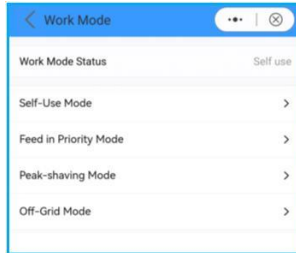


Figure 5.21

Grid Code Setting

Please select the Grid code you need.



Figure 5.22

Battery Setting

Battery Model: select the battery model to be connected.

Battery Over-voltage/Under-voltage Protection: fill in the appropriate data to protect the battery and extend its life.

Over-discharge SOC: when the battery is discharged to the over-discharge SOC, the battery will not discharge actively. (Due to the internal current conduction, there is a small self-consumption power, if not charged for a long time, the SOC will slowly continue to decline.)

Force-charge SOC: due to the battery power consumption, when the over-discharge SOC drops to the force-charge SOC, the inverter will directly charge the battery according to the maximum battery charging current until the battery SOC reaches the over-discharge SOC. (The charging power is not limited to sources, which may be from PV or from the grid. If "Charging from grid" is set to "Not Allow", the charging logic may not be implemented.)

It is not recommended to set the over-discharge&force-charge SOC to the same value, which may cause frequent charging and discharging.

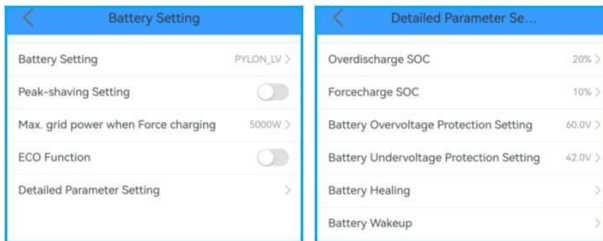


Figure 5.23

Meter Setting

Meter type: please select a correct meter type. The wrong option will cause the meter RS485 communication Failed. If the battery and meter are not connected, you can select the "NO Meter" to shield the alarm of meter communication fault.

Meter Installation Location: Meter in Grid/Meter in Load/Grid + PV inverter.

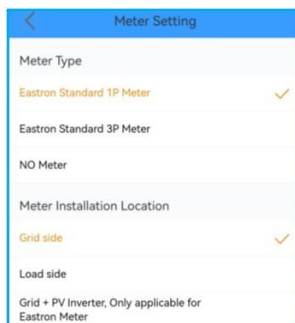


Figure 5.24

Backup Setting

Backup Port Enabling Setting: please turn on it if the Backup port is needed.

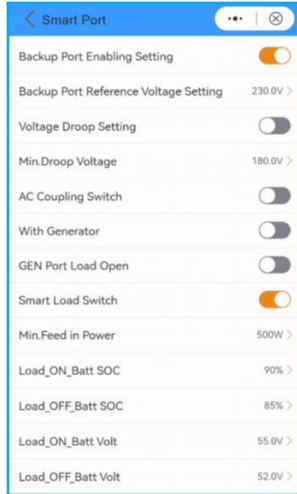


Figure 5.25

Alarm

The Alarm page can display the Current Alarm(unsolved faults) and the Historical Alarm (resolved faults).

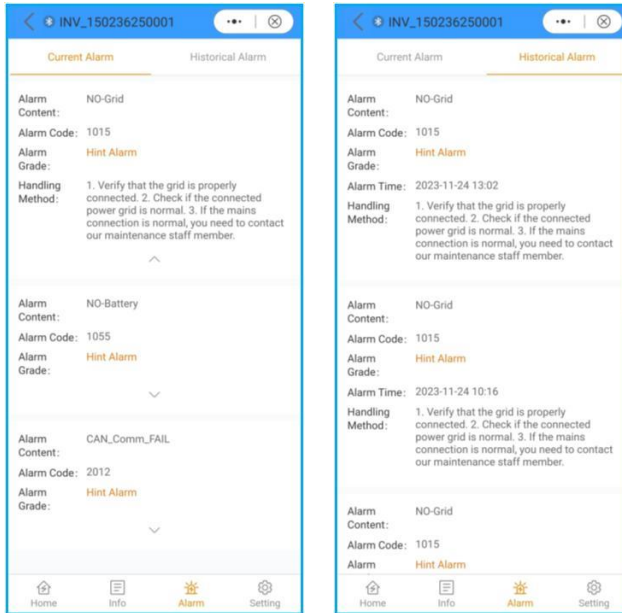


Figure 5.26

5.4 Shutdown procedure

- Step 1. Turn off the AC circuit breaker at the grid-connection point.
- Step 2. Turn off the DC switch of the inverter.
- Step 3. Turn off the battery circuit breaker.
- Step 4. Wait until the device is powered off and the system is shut down.

Haier H1PL inverter does not require any regular maintenance. However, cleaning the heatsink will help the inverter dissipate heat and increase the lifetime of inverter. The dirt on the inverter can be cleaned with a soft brush.



CAUTION:

Do not touch the surface when the inverter is operating. Some parts may be hot and could cause burns. Turn off the inverter and let it cool down before you do any maintenance or cleaning of inverter.

The Screen and the LED status indicator lights can be cleaned with cloth if they are too dirty to be read.



Note:

Never use any solvents, abrasives, or corrosive materials to clean the inverter.

6.1 Smart O&M

In order to improve our products and provide you with higher quality services, this device has a built-in data logging module for collecting relevant information during operation (such as power generation data, fault data)

Commitment:

1. We will only collect, use and process your device information for the purpose of improving our products and services.
2. We will take all reasonable and feasible measures to ensure that no irrelevant information is collected and we will protect your device information.
3. We will not share, transfer or disclose the collected device information with any company, organization or individual.
4. When we stop operating products or services, we will stop collecting your device information in a timely manner.
5. If you do not want to provide such information, you can notify our company to turn off this function, which will not affect your normal use of other functions of the product.

Message Name	Information Description	Troubleshooting Suggestion
Off	Control device to shutdown	1. Turn on the device in the ON/OFF Setting.
LmtByEPM	The device's output is under controlled	<ol style="list-style-type: none"> 1. Confirm whether the inverter is connected to an external EPM/meter to prevent reverse current. 2. Confirm whether the inverter is controlled by an external third-party device. 3. Confirm whether the power setting of the inverter power control is limited. 4. Verify settings in section 6.6.7 and check your meter readings.
LmtByDRM	DRM Function ON	1. No need to deal with it.
LmtByTemp	Over temperature power limited	1. No need to deal with it, the device is in normal operation.
LmtByFreq	Frequency power limited	
LmtByVg	The device is in the Volt-Watt mode	<ol style="list-style-type: none"> 1. Due to the requirements of local safety regulations, when the grid voltage is high, the Volt-watt working mode is triggered, which generally does not need to be dealt with. 2. Inverter factory test errors causing this mode to open, if you need to close, you can close this mode in LCD, set the process: Main menu □ Advanced Settings □ Password 0010 □ STD mode settings □ Working Mode □ Working mode: NULL □ Save and exit.
LmtByVar	The device is in the Volt-Var mode of operation	<ol style="list-style-type: none"> 1. Due to the requirements of local safety regulations, when the grid voltage is high, the Volt-watt working mode is triggered, which generally does not need to be dealt with. 2. Inverter factory test errors causing this mode to open, if you need to close, you can close this mode in LCD, set the process: Main menu □ Advanced Settings □ Password 0010 □ STD mode settings □ Working Mode □ Working mode: NULL □ Save and exit.
LmtByUnFr	Under frequency limit	1. No need to deal with it.
Standby	Bypass run	
StandbySynoch	Off grid status to On grid status	
GridToLoad	Grid to load	

Message Name	Information Description	Troubleshooting Suggestion
Surge Alarm	On-site grid surge	1. Grid side fault, restart the device. If it is still not eliminated, please contact the manufacturer's customer service.
OV-G-V01	Grid voltage exceeds the upper voltage range	1. Confirm whether the power grid is abnormal. 2. Confirm that the AC cable is properly connected. 3. Restart the system and check if the fault persists.
UN-G-V01	Grid voltage exceeds the lower voltage range	
OV-G-F01	Grid frequency exceeds the upper frequency range	
UN-G-F01	Grid frequency exceeds the lower frequency range	
G-PHASE	Unbalanced grid voltage	
G-F-GLU	Grid voltage frequency fluctuation	
NO-Grid	No grid	
OV-G-V02	Grid transient overvoltage	
OV-G-V03	Grid transient overvoltage	1. Restart the system, confirm if that the fault continues.
IGFOL-F	Grid current tracking failure	1. Confirm whether the power grid is abnormal. 2. Confirm that the AC cable is properly connected. 3. Restart the system and check if the fault persists.
OV-G-V05	Grid voltage RMS instantaneous overvoltage fault	
OV-G-V04	Grid voltage exceeds the upper voltage range	
UN-G-V02	Grid voltage exceeds the lower voltage range	
OV-G-F02	Grid frequency exceeds the upper frequency range	
UN-G-F02	Grid frequency exceeds the lower frequency range	
NO-Battery	Battery is not connected	1. Check on information page 1 – Verify the battery voltage is within standards. 2. Measure battery voltage at plug.
OV-Vbackup	Inverting overvoltage	1. Check whether the backup port wiring is normal 2. Restart the system, confirm that the fault continues.
Over-Load	Load overload fault	1. Backup load power is too large, or some inductive load startup power is too large, need to remove some backup load, or remove the inductive load on the backup.

Message Name	Information Description	Troubleshooting Suggestion
BatName-FAIL	Wrong battery brand selection	1. Confirm whether the battery model selection is consistent with the actual one.
CAN Fail	CAN Fail	1. CAN failure is a failure of communication between inverter and battery. Check cable conditions. Check to ensure you have it plugged in on the CAN port of the battery and inverter. Check that you are using the right cable. Some batteries require a special battery from the battery manufacturer.
OV-Vbatt	Battery overvoltage detected	1. Verify battery voltage is within standards. Measure battery voltage at inverter connection point. Contact your battery manufacturer for further service.
UN-Vbatt	Battery undervoltage detected	1. Restart the system and check if the fault persists. If it is still not eliminated, please contact the manufacturer's customer service.
Fan Alarm	Fan alarm	1. Check if the internal fan is working correctly or jammed.
OV-DC01 (1020 DATA:0001)	DC 1 input overvoltage	1. Check if the PV voltage is abnormal 2. Restart the system, confirm that the fault continues
OV-DC02 (1020 DATA:0002)	DC 2 input overvoltage	
OV-BUS (1021 DATA:0000)	DC bus overvoltage	1. Restart the system, confirm that the fault continues.
UN-BUS01 (1023 DATA:0001)	DC bus undervoltage	
UNB-BUS (1022 DATA:0000)	DC bus unbalanced voltage	
UN-BUS02 (1023 DATA:0002)	Abnormal detection of DC bus voltage	
DC-INTF. (1027 DATA:0000)	DC hardware overcurrent (1, 2, 3, 4)	1. Check if the DC wires are connected correctly without loose connection.
OV-G-I (1018 DATA:0000)	A phase RMS value overcurrent	1. Confirm that the grid is abnormal. 2. Confirm that the AC cable connection is not abnormal. 3. Restart the system, confirm that the fault continues.
OV-DCA-I (1025 DATA:0000)	DC 1 average overcurrent	1. Restart the system, confirm that the fault continues.
OV-DCB-I (1026 DATA:0000)	DC 2 average overcurrent	
GRID-INTF. (1030 DATA:0000)	AC hardware overcurrent (abc phase)	

Message Name	Information Description	Troubleshooting Suggestion
DCInj-FAULT (1037 DATA:0000)	The current DC component exceeds the limit	<ol style="list-style-type: none"> 1. Confirm that the grid is abnormal. 2. Confirm that the AC cable connection is not abnormal. 3. Restart the system, confirm that the fault continues.
IGBT-OV-I (1048 DATA:0000)	IGBT overcurrent	<ol style="list-style-type: none"> 1. Restart the system, confirm that the fault continues.
OV-TEM (1032 DATA:0000)	Module over temperature	<ol style="list-style-type: none"> 1. Check whether the surrounding environment of the inverter has poor heat dissipation. 2. Confirm whether the product installation meets the requirements.
RelayChk-FAIL (1035 DATA:0000)	Relay failure	<ol style="list-style-type: none"> 1. Restart the system, confirm that the fault continues.
UN-TEM (1034 DATA:0000)	Low temperature protection	<ol style="list-style-type: none"> 1. Check the working environment temperature of the inverter. 2. Restart the system to confirm if the fault continues.
PV ISO-PRO01 (1033 DATA:0001)	PV negative ground fault	<ol style="list-style-type: none"> 1. Check whether the PV strings have insulation problems. 2. Check whether the PV cable is damaged.
PV ISO-PRO02 (1033 DATA:0002)	PV positive ground fault	
12Power-FAULT (1038 DATA:0000)	12V undervoltage failure	<ol style="list-style-type: none"> 1. Check current leakage to ground. Verify your grounding. Verify all wires are in good condition and not leaking current to ground.
ILeak-PRO01 (1034 DATA:0001)	Leakage current failure 01 (30mA)	
ILeak-PRO02 (1034 DATA:0002)	Leakage current failure 02 (60mA)	
ILeak-PRO03 (1034 DATA:0003)	Leakage current failure 03 (150mA)	
ILeak-PRO04 (1034 DATA:0004)	Leakage current failure 04	
ILeak_Check (1039 DATA:0000)	Leakage current sensor failure	
GRID-INTF02 (1046 DATA:0000)	Power grid disturbance 02	<ol style="list-style-type: none"> 1. Confirm whether the grid is seriously distorted. 2. Check whether the AC cable is connected reliably.
OV-Vbatt-H/ OV-BUS-H (1051 DATA:0000)	Battery overvoltage hardware failure / VBUS	<ol style="list-style-type: none"> 1. Check if the battery circuit breaker is tripping. 2. Check if the battery is damaged.

Message Name	Information Description	Troubleshooting Suggestion
OV-ILLC (1052 DATA:0000)	LLC hardware overcurrent	1. Check whether the backup load is overloaded. 2. Restart the system, confirm that the fault continues.
INI-FAULT (1031 DATA:0000)	AD zero drift overlink	1. Restart the system, confirm that the fault continues.
DSP-B-FAULT (1036 DATA:0000)	The master-slave DSP communication is abnormal	
AFCI-Check (1040 DATA:0000)	AFCI self-test failure	
ARC- FAULT (1041 DATA:0000)	AFCI failure	1. Verify connections are tight within your PV system. Arc fault settings can be changed in advanced settings if further adjustment is necessary.

Table 7.1 Fault message and description



NOTE:

If the inverter displays any alarm message as listed in Table 7.1; please turn off the inverter and wait for 5 minutes before restarting it.
If the failure persists, please contact your local distributor or the service center.

Please keep ready with you the following information before contacting us.

1. Serial number of Haier Singles Phase Inverter;
2. The distributor/dealer of Haier Singles Phase Inverter (if available);
3. Installation date.
4. The description of the problem together with necessary information, pictures, attachment.
5. The PV array configuration (e.g. number of panels, capacity of panels, number of strings, etc.);
6. Your contact details.

8. Specifications

Technical Data	H1PL-1J3K-EU	H1PL-1J3.6K-EU
Input DC (PV side)		
Recommended max. PV power	4800W	5700W
Max. input voltage	600V	
Rated voltage	330V	
Start-up voltage	90V	
MPPT voltage range	90-520V	
Full load MPPT voltage range	105-520V	125-520V
Max. input current	16A/16A	
Max. short circuit current	24A/24A	
MPPT number/Max input strings number	2/2	
Battery		
Battery Type	Li-ion / Lead-acid	
Battery Voltage range	42 - 58V	
Battery Capacity	50 - 2000Ah	
Maximum Charging Power	3kW	3.6kW
Maximum Charge/discharge current	62.5A	75A
Communication	CAN	
Output AC(Back-up)		
Rated output power	3kW	3.6kW
Max. apparent output power	4.2 kVA, 60SEC	5 kVA, 60SEC
Back-up switch time	< 10ms	
Rated output voltage	1/N/PE, 220 V/230 V	
Rated frequency	50Hz/60Hz	
Max. output current	19.1 A	22.7 A
THDv(@linear load)	2%	
Input AC (Grid side)		
Input voltage range	187-253V	
Max. input current	20.0 A	24.6 A
Frequency range	45-55 Hz/ 55-65Hz	

8. Specifications

Technical Data	H1PL-1J3K-EU	H1PL-1J3.6K-EU
Output AC(Grid side)		
Rated output power	3kW	3.6kW
Max. apparent output power	3kVA	3.6kVA
Operation phase	1/N/PE	
Rated grid voltage	220 V/230 V	
The grid voltage range	187-253 V	
Rated grid frequency	50 Hz/60 Hz	
AC grid frequency range	45-55 Hz/55-65 Hz	
Rated grid output current	13.6 A/13.0 A	16.4 A/15.7 A
Max. output current	13.6 A/13.0 A	16.4 A/15.7 A
Power Factor	> 0.99 (0.8 leading - 0.8 lagging)	
THDi	<2%	
Efficiency		
Max efficiency	>97.0%	
EU efficiency	>96.2%	
BAT charged by PV Max. efficiency	>94.9%	
BAT charged/discharged to AC Max. efficiency	>94.33%/93.51%	
Protection		
Ground fault monitoring	Yes	
Residual current monitoring	Yes	
Integrated AFCI	Yes	
DC reverse polarity protection	Yes	
Protection class / Over voltage category	I / II	

8. Specifications

Technical Data	H1PL-1J3K-EU	H1PL-1J3.6K-EU
General data		
Dimensions(W/H/D)	405*480*205mm	
Weight	24.18kg	
Topology	High frequency insolation (for battery)	
Operation temperature range	-25°C ~ +60°C	
Ingress protection	IP66	
Cooling concept	Natural convection	
Max.operation altitude	4000m	
Grid connection standard	G98 or G99, VDE-AR-N 4105 / VDE V 0124, EN 50549-1, VDE 0126 / UTE C 15 / VFR:2019, RD 1699 / RD 244 / UNE 206006 / UNE 206007-1, CEI 0-21, C10/11, NRS 097-2-1, TOR, EIFS 2018.2, IEC 62116, IEC 61727, IEC 60068, IEC 61683, EN 50530, MEA, PEA	
Safety/EMC standard	IEC/EN 62109-1/-2, EN 61000-6-1/-2/-3/-4	
Wireless signal frequency range	2400-2483.5MHz	
Wireless max power	Bluetooth: 4dBm	
Features		
DC connection	MC4 connector	
AC connection	Quick connection plug	
Display	LED+APP	
Communication	RS485,CAN, Optional: Wi-Fi, GPRS, LAN*	
Warranty	10 years standard	

8. Specifications

Technical Data	H1PL-1J4.6K-EU	H1PL-1J5K-EU
Input DC (PV side)		
Recommended max. PV power	7000W	8000W
Max. input voltage	600V	
Rated voltage	330V	
Start-up voltage	90V	
MPPT voltage range	90-520V	
Full load MPPT voltage range	160-520V	175-520V
Max. input current	16A/16A	
Max. short circuit current	24A/24A	
MPPT number/Max input strings number	2/2	
Battery		
Battery Type	Li-ion / Lead-acid	
Battery Voltage range	42 - 58V	
Battery Capacity	50 - 2000Ah	
Maximum Charging Power	4.6kW	5kW
Maximum Charge/discharge current	100A	105A
Communication	CAN	
Output AC(Back-up)		
Rated output power	4.6kW	5kW
Max. apparent output power	6.4 kVA, 60SEC	7 kVA, 60SEC
Back-up switch time	< 10ms	
Rated output voltage	1/N/PE, 220 V/230 V	
Rated frequency	50Hz/60Hz	
Max. output current	29.1 A	31.8 A
THDv(@linear load)	2%	
Input AC (Grid side)		
Input voltage range	187-253V	
Max. input current	31.4 A	32.0 A
Frequency range	45-55 Hz/ 55-65Hz	

8. Specifications

Technical Data	H1PL-1J4.6K-EU	H1PL-1J5K-EU
Output AC(Grid side)		
Rated output power	4.6kW	5kW
Max. apparent output power	4.6kVA	5kVA
Operation phase	1/N/PE	
Rated grid voltage	220 V/230 V	
The grid voltage range	187-253 V	
Rated grid frequency	50 Hz/60 Hz	
AC grid frequency range	45-55 Hz/55-65 Hz	
Rated grid output current	20.9 A/20.0 A	22.7 A/21.7 A
Max. output current	20.9 A/20.0 A	22.7 A/21.7 A
Power Factor	> 0.99 (0.8 leading - 0.8 lagging)	
THDi	<2%	
Efficiency		
Max efficiency	>97.5%	
EU efficiency	>96.2%	
BAT charged by PV Max. efficiency	>94.9%	
BAT charged/discharged to AC Max. efficiency	>94.33%/93.51%	
Protection		
Ground fault monitoring	Yes	
Residual current monitoring	Yes	
Integrated AFCI	Yes	
DC reverse polarity protection	Yes	
Protection class / Over voltage category	I / II	

8. Specifications

Technical Data	H1PL-1J4.6K-EU	H1PL-1J5K-EU
General data		
Dimensions(W/H/D)	405*480*205mm	
Weight	24.18kg	
Topology	High frequency insulation (for battery)	
Operation temperature range	-25°C ~ +60°C	
Ingress protection	IP66	
Cooling concept	Natural convection	
Max.operation altitude	4000m	
Grid connection standard	G98 or G99, VDE-AR-N 4105 / VDE V 0124, EN 50549-1, VDE 0126 / UTE C 15 / VFR:2019, RD 1699 / RD 244 / UNE 206006 / UNE 206007-1, CEI 0-21, C10/11, NRS 097-2-1, TOR, EIFS 2018.2, IEC 62116, IEC 61727, IEC 60068, IEC 61683, EN 50530, MEA, PEA	
Safety/EMC standard	IEC/EN 62109-1/-2, EN 61000-6-1/-2/-3/-4	
Wireless signal frequency range	2400-2483.5MHz	
Wireless max power	Bluetooth: 4dBm	
Features		
DC connection	MC4 connector	
AC connection	Quick connection plug	
Display	LED+APP	
Communication	RS485,CAN, Optional: Wi-Fi, GPRS, LAN*	
Warranty	10 years standard	

8. Specifications

Technical Data	H1PL-1J6K-EU
Input DC (PV side)	
Recommended max. PV power	9600W
Max. input voltage	600V
Rated voltage	330V
Start-up voltage	90V
MPPT voltage range	90-520V
Full load MPPT voltage range	210-520V
Max. input current	16A/16A
Max. short circuit current	24A/24A
MPPT number/Max input strings number	2/2
Battery	
Battery Type	Li-ion / Lead-acid
Battery Voltage range	42 - 58V
Battery Capacity	50 - 2000Ah
Maximum Charging Power	6kW
Maximum Charge/discharge current	125A
Communication	CAN
Output AC(Back-up)	
Rated output power	6kW
Max. apparent output power	8 kVA, 60SEC
Back-up switch time	< 10ms
Rated output voltage	1/N/PE, 220 V/230 V
Rated frequency	50Hz/60Hz
Max. output current	36.4 A
THDv(@linear load)	2%
Input AC (Grid side)	
Input voltage range	187-253V
Max. input current	40 A
Frequency range	45-55 Hz/ 55-65Hz

8. Specifications

Technical Data	H1PL-1J6K-EU
Output AC(Grid side)	
Rated output power	6kW
Max. apparent output power	6kVA
Operation phase	1/N/PE
Rated grid voltage	220V/230V
The grid voltage range	187-253V
Rated grid frequency	50 Hz/60 Hz
AC grid frequency range	45-55 Hz/55-65 Hz
Rated grid output current	27.3 A/26.1 A
Max. output current	27.3 A/26.1 A
Power Factor	> 0.99 (0.8 leading - 0.8 lagging)
THDi	<2%
Efficiency	
Max efficiency	>97.5%
EU efficiency	>96.2%
BAT charged by PV Max. efficiency	>94.9%
BAT charged/discharged to AC Max. efficiency	>94.33%/93.51%
Protection	
Ground fault monitoring	Yes
Residual current monitoring	Yes
Integrated AFCI	Yes
DC reverse polarity protection	Yes
Protection class / Over voltage category	I/ II

Technical Data	H1PL-1J6K-EU
General data	
Dimensions(W/H/D)	405*480*205mm
Weight	24.2kg
Topology	High frequency insolation (for battery)
Operation temperature range	-25°C ~ +60°C
Ingress protection	IP66
Cooling concept	Natural convection
Max.operation altitude	4000m
Grid connection standard	G98 or G99, VDE-AR-N 4105 / VDE V 0124, EN 50549-1, VDE 0126 / UTE C 15 / VFR:2019, RD 1699 / RD 244 / UNE 206006 / UNE 206007-1, CEI 0-21, C10/11, NRS 097-2-1, TOR, EIFS 2018.2, IEC 62116, IEC 61727, IEC 60068, IEC 61683, EN 50530, MEA, PEA
Safety/EMC standard	IEC/EN 62109-1/-2, EN 61000-6-1/-2/-3/-4
Features	
DC connection	MC4 connector
AC connection	Quick connection plug
Display	LED+APP
Communication	RS485,CAN, Optional: Wi-Fi, GPRS, LAN*
Warranty	10 years standard

*WIFI/GPRS communication function needs to use the data logger, LAN communication needs to cooperate with the upper PC.

Bluetooth

Frequency range:2400-2483.5MHz

WiFi maximum transmitting power:4dBm

Annex A

Important Information

Installation and operations on the system must be performed by qualified personnel or a partner certified by Haier Energy.

Be sure to always consult the latest version of the User Manual and the "Haier Energy Products Terms of Warranty" before you start installing the product. You can download them from our website: <https://eur.nahui-newenergy.com/>

In addition to what is specified in this manual, to make sure your products are covered by the "Haier Energy Products Terms of Warranty", please make sure the following instructions are always respected.

In case of discrepancies with the manual, the present Annex and the Haier Energy Products Terms of Warranty shall prevail.

1. Connecting the system to the monitoring portal

For the product to be covered by the "Haier Energy Products Terms of Warranty" they must be registered and permanently connected to the Nahui Energy/Haier Energy monitoring portal during the period of validity of the Warranty.

By installing the products and connecting them to the Nahui Energy/Haier Energy monitoring portal, the purchaser agrees that Haier Energy shall be entitled to update the products, without notice, if strictly necessary.

2. Operation of the system with battery

If the state of charge of the battery (SOC) connected to the inverter is low due to loss of energy from self-consumption or long periods without being charged, the system will try to force the charge of the battery to prevent damage from over-discharge. In case PV power is insufficient, the system will attempt to charge from the grid.

If the inverter is disconnected/shut down or if charging from the grid is not properly configured/enabled by qualified personnel, the battery could be irreversibly discharged and damaged. Cases like this are not covered by "Haier Energy Products Terms of Warranty",

If the battery SOC reaches 5%, the battery must be charged within 7 (seven) days of reaching this minimum threshold. Any permanent damage to the battery due to failure to charge according to these guidelines will not be covered by the relevant "Haier Energy Products Terms of Warranty" (Refer to the technical note "How to preserve the efficiency of your batteries" for further details).

Qingdao Nahui Energy Technology Co., LTD.

Address: Room303,Entrance1,No.4Building,

Lan Gu Entrepreneurship Center Phase 1,No.7,Keji Yilu Road,

Aoshanwei Sub district Office,Jimo District Office,Jimo District,Qingdao,Shandong

Copyright Declaration

All rights to the content of this manual are owned by Qingdao Nahui EnergyTechnology Co., Ltd. (hereinafter called as 'Nahui Energy'). Any corporation or individual should not plagiarize, partially or fully copy it, and reproduce or distribute of it in any form or means without prior written permission from Nahui Energy.

Nahui Energy reserves the right of final interpretation.

This manual may be updated according to user's or customer's feedback. The information in this manual is subject to change without notice. Please check our website at <https://www.nahui-newenergy.com> for latest version.



Please adhere to the actual products in case of any discrepancies in this user manual.

If you encounter any problem on the inverter, please find out the inverter S/N and contact us, we will try to respond to your question ASAP.