

Solve™

INSTALLER CHECKLIST

Everything you need for a Solve Mount installation

ESSENTIAL TOOLS



28mm Diamond Coring Bit




7mm Wood Auger Drill Bit

Bosch PRO



Solve Drill Guide

1 per box included

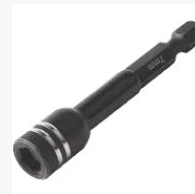

7mm Hex Socket

For drill driver




Battery Drill Driver

High speed, NO hammer



Tape Measure

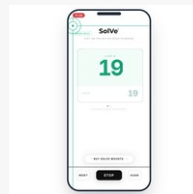

Rafter Finder by Solve

Or alternative



Chalk Marker

Or similar



2 x 15mm Spanners



1 x 17mm Spanner

PROHIBITED TOOLS

- ☒ Non-diamond coring bit
- ☒ Blunt coring bit
- ☒ Over / under sized coring bit
- ☒ Hammer action drill — never use hammer action on tile or timber
- ☒ Impact driver

Before You Start

Ensure your battery drill driver is set to HIGH SPEED mode with NO hammer action. Check your coring bit is undamaged before each install. Always use the Solve Drill Guide for accurate positioning, the helps the seal enter the hole without getting caught, ensuring even expansion.